
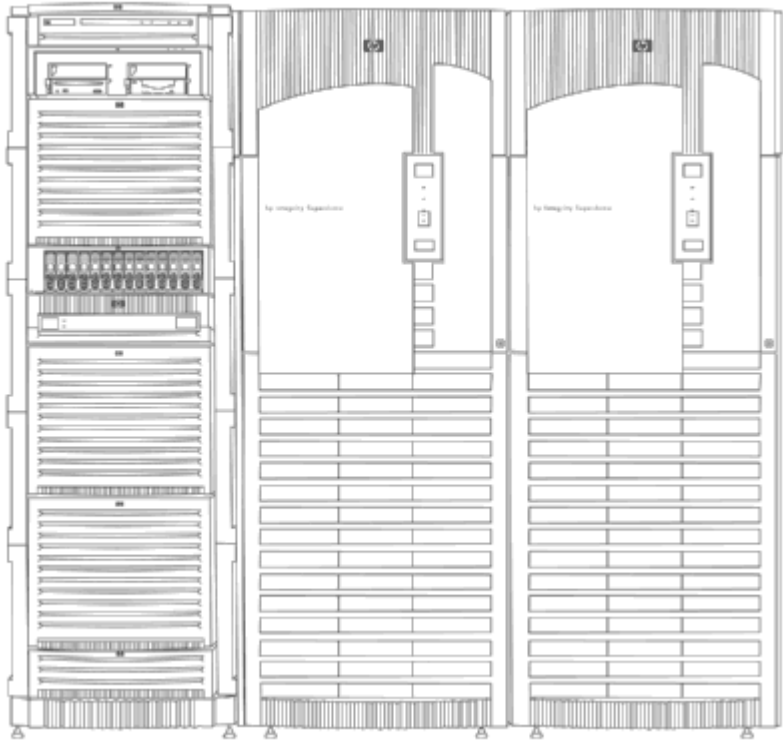


Overview

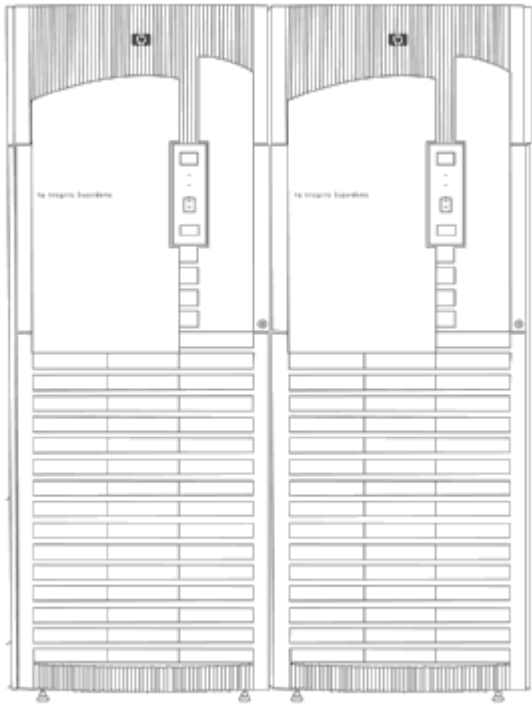

Overview

At A Glance

The latest release of Superdome, HP Integrity Superdome supports the new and improved sx1000 chip set. HP Integrity Superdome supports the following processors:

- Itanium 2 1.5 GHz and 1.6-GHz processors
- HP mx2 processor module based on two Itanium 2 processors

HP Integrity Superdome supports mixing the Itanium 2 1.5 GHz processor, the Itanium 2 1.6 GHz processor and the HP mx2 processor module in the same system, but on different partitions.

Throughout the rest of this document, the term HP Integrity Superdome with Itanium 2 1.5 GHz processors, Itanium 2 1.6-GHz processors or mx2 processor modules will be referred to as simply "Superdome".

Superdome with Itanium processors showcases HP's commitment to delivering a 64 socket Itanium server and superior investment protection. It is the dawn of a new era in high end computing with the emergence of commodity based hardware.

Superdome supports a multi OS environment. Currently, HP UX, Windows Server 2003, Red Hat RHEL AS 3, and SUSE SLES 9 are shipping with Integrity Superdome. Customers can order any combination of HP UX 11i v2, Windows Server 2003, Datacenter Edition, or RHEL AS 3, running in separate hard partitions.

The multi-OS environment offered by Superdome is listed below.

HP-UX 11i version 2

- Improved performance over PA-8700
- Investment protection through upgrades from existing Superdomes to next-generation Itanium 2 processors

Windows Server 2003, Datacenter Edition for Itanium 2

- Extension of industry standard-based computing with the Windows operating system further into the enterprise data center
- Increased performance and scalability over 32-bit implementations
- Lower cost of ownership versus proprietary operating system solutions
- Ideal for scale up database opportunities (such as SQL Server 2000 (64-bit), Enterprise Edition)
- Ideal for database consolidation opportunities such as consolidation of legacy 32-bit versions of SQL Server 2000 to SQL Server 2000 (64-bit)

Red Hat RHEL AS 3 and SUSE SLES 9

- Extension of industry standard computing with Linux further into the enterprise data center
 - Lower cost of ownership
 - Ideal for server consolidation opportunities
 - Not supported on Superdome with mx2 processor modules
-

Overview

Superdome Service Solutions

Superdome continues to provide the same positive Total Customer Experience via industry-leading HP Services, as with existing Superdome servers. The HP Services component of Superdome is as follows:

- HP customers have consistently achieved higher levels of satisfaction when key components of their IT infrastructures are implemented using the **Solution Life Cycle**. The Solution Life Cycle focuses on rapid productivity and maximum availability by examining customers' specific needs at each of five distinct phases (plan, design, integrate, install, and manage) and then designing their Superdome solution around those needs. HP offers three pre configured service solutions for Superdome that provides customers with a choice of lifecycle services to address their own individual business requirements.
 - **Foundation Service Solution:** This solution reduces design problems, speeds time-to-production, and lays the groundwork for long-term system reliability by combining pre-installation preparation and integration services, hands on training and reactive support. This solution includes HP Support Plus 24 to provide an integrated set of 24x7 hardware and software services as well as software updates for selected HP and third party products.
 - **Proactive Service Solution:** This solution builds on the Foundation Service Solution by enhancing the management phase of the Solution Life Cycle with HP Proactive 24 to complement your internal IT resources with proactive assistance and reactive support. Proactive Service Solution helps reduce design problems, speed time to production, and lay the groundwork for long term system reliability by combining pre installation preparation and integration services with hands on staff training and transition assistance. With HP Proactive 24 included in your solution, you optimize the effectiveness of your IT environment with access to an HP-certified team of experts that can help you identify potential areas of improvement in key IT processes and implement necessary changes to increase availability.
 - **Critical Service Solution:** Mission Critical environments are maintained by combining proactive and reactive support services to ensure maximum IT availability and performance for companies that can't tolerate downtime without serious business impact. Critical Service Solution encompasses the full spectrum of deliverables across the Solution Lifecycle and is enhanced by HP Critical Service as the core of the management phase. This total solution provides maximum system availability and reduces design problems, speeds time-to-production, and lays the groundwork for long term system reliability by combining pre-installation preparation and integration services, hands on training, transition assistance, remote monitoring, and mission critical support. As part of HP Critical Service, you get the services of a team of HP certified experts that will assist with the transition process, teach your staff how to optimize system performance, and monitor your system closely so potential problems are identified before they can affect availability.
- **HP's Mission Critical Partnership:** This service offering provides customers the opportunity to create a custom agreement with Hewlett Packard to achieve the level of service that you need to meet your business requirements. This level of service can help you reduce the business risk of a complex IT infrastructure, by helping you align IT service delivery to your business objectives, enable a high rate of business change, and continuously improve service levels. HP will work with you proactively to eliminate downtime, and improve IT management processes.
- **Service Solution Enhancements:** HP's full portfolio of services is available to enhance your Superdome Service Solution in order to address your specific business needs. Services focused across multi-operating systems as well as other platforms such as storage and networks can be combined to compliment your total solution.

Standard Features

Minimum/Maximum Configurations for Superdome with Intel Itanium 2 Processors (1.5-GHz and 1.6-GHz)

System Size	Minimum Configuration			Maximum Configuration (One Partition)			
16 Sockets	HP-UX 11i V2	Windows 2003 Datacenter	Red Hat RHEL AS3/ and SUSE SLES 9	HP-UX 11i V2	Windows 2003 Datacenter	SUSE SLES 9	Red Hat RHEL AS 3
CPU's	2	2	2	16	16	16	8
Memory	2 GB	2 GB	2 GB	256 GB	256 GB	256 GB	128 GB
Cell Boards	1 Cell Board	1 Cell Board	1 Cell Board	4 Cell Boards	4 Cell Boards	4 Cell Boards	2 Cell Boards
PCI-X Chassis	1	1	1	4	4	4	2
Max nPARS	Not applicable	Not applicable	Not applicable	4	4	4	4
32-socket							
CPU's	2	2	2	32	32	16	8
Memory	2 GB	2 GB	2 GB	512 GB	512 GB	256 GB	128 GB
Cell Boards	1 Cell Board	1 Cell Board	1 Cell Board	8 Cell Boards	8 Cell Boards	4 Cell Boards	2 Cell Boards
PCI-X Chassis	1	1	1	8	8	2	2
Max nPARS	Not applicable	Not applicable	Not applicable	8 (1)	8 (1)	8(1)	8(1)
64 Sockets							
CPU's	6	6	6	64	64	16	8
Memory	6 GB	6 GB	6 GB	1024 GB	1024 GB	256 GB	128 Gb
Cell Boards	3 Cell Boards	3 Cell Boards	3 Cell Boards	16 Cell Boards	16 Cell Boards	4 Cell Boards	2 Cell Boards
PCI-X Chassis	1	1	1	16	16	2	2
Max nPARS	Not Applicable	Not Applicable	Not Applicable	16 (2)	16 (2)	16 (2)	16 (2)
Standard Hardware Features	<ul style="list-style-type: none"> • Redundant Power supplies • Redundant Fans • Factory integration of memory and I/O cards • Installation Guide, Operator's Guide and Architecture Manual • HP site planning and installation • One-year warranty with same business day on-site service response 						
	(1) Requires I/O Expansion cabinet if more than 4 nPARS						
	(2) Requires I/O Expansion cabinet if more than 8 nPARS						

Minimum/Maximum Configurations for Superdome with mx2 Processor Modules

Standard Features

System Size	Minimum Configuration		Maximum Configuration (One Partition)	
16 Sockets	HP-UX 11i V2	Windows 2003 Datacenter	HP-UX 11i V2	Windows 2003 Datacenter
CPU's	2	2	32	32
Memory	2 GB	2 GB	256 GB	256 GB
Cell Boards	1 Cell Board	1 Cell Board	4 Cell Boards	4 Cell Boards
PCI-X Chassis	1	1	4	4
Max nPARS	Not applicable	Not applicable	4	4
32-socket				
CPU's	2	2	64	64
Memory	2 GB	2 GB	512 GB	512 GB
Cell Boards	1 Cell Board	1 Cell Board	8 Cell Boards	8 Cell Boards
PCI-X Chassis	1	1	8	8
Max nPARS	Not applicable	Not applicable	8 (1)	8 (1)
64-socket				
CPU's	6	6	128	64
Memory	6 GB	6 GB	1024 GB	1024 GB
Cell Boards	3 Cell Boards	3 Cell Boards	16 Cell Boards	16 Cell Boards
PCI-X Chassis	1	1	16	16
Max nPARS	Not Applicable	Not Applicable	16 (2)	16 (2)
Standard Hardware Features	<ul style="list-style-type: none"> • Redundant Power supplies • Redundant Fans • Factory integration of memory and I/O cards • Installation Guide, Operator's Guide and Architecture Manual • HP site planning and installation • One-year warranty with same business day on-site service response 			
	(1) Requires I/O Expansion cabinet if more than 4 nPARS (2) Requires I/O Expansion cabinet if more than 8 nPARS			

Configuration

There are three basic building blocks in the Superdome system architecture: the cell, the crossbar backplane and the PCI-X based I/O subsystem.

Cabinets

Starting with the sx1000 chip set, Superdome servers will be released with the Graphite color. A Superdome system will consist of up to four different types of cabinet assemblies:

- One Superdome left cabinet.
- No more than one Superdome right cabinet (only Superdome 64-socket system)
The Superdome cabinets contain all of the processors, memory and core devices of the system. They will also house most (usually all) of the system's PCI-X cards. Systems may include both left and right cabinet assemblies containing, a left or right backplane respectively.
- One or more HP Rack System/E cabinets. These 19-inch rack cabinets are used to hold the system peripheral devices such as disk drives.
- Optionally, one or more I/O expansion cabinets (Rack System/E). An I/O expansion cabinet is required when a customer requires more PCI X cards than can be accommodated in their Superdome cabinets.

Superdome cabinets will be serviced from the front and rear of the cabinet only. This will enable customers to arrange the cabinets of their Superdome system in the traditional row fashion found in most computer rooms. The width of the cabinet will accommodate moving it through common doorways in the U.S. and Europe. The intake air to the main (cell) card cage will be filtered. This filter will be removable for cleaning/replacement while the system is fully operational.

A status display will be located on the outside of the front and rear doors of each cabinet. The customer and field engineers can therefore determine basic status of each cabinet without opening any cabinet doors.

Superdome 16-socket and Superdome 32-socket systems are available in single cabinets. Superdome 64-socket systems are available in dual cabinets.

Each cabinet may contain a specific number of cell boards (consisting of CPUs and memory) and I/O. See the following sections for configuration rules pertaining to each cabinet.

Cells (CPUs and Memory) A cell, or cell board, is the basic building block of a Superdome system. It is a symmetric multi processor (SMP), containing up to 4 processor modules and up to 16 GB of main memory using 512 MB DIMMs, up to 32 GB of main memory using 1 GB DIMMs and up to 64 GB of main memory using 2 GB DIMMs. It is also possible to mix 512 MB, 1 GB DIMMs and 2 GB DIMMs on the same cell board. A connection to a 12 slot PCI X card cage is optional for each cell.

The Superdome cell boards shipped from the factory are offered with 2 sockets or 4 sockets. These cell boards are different from those that were used in the previous PA RISC releases of Superdome.

The Superdome cell board contains:

- Itanium 2 1.5 GHz CPUs or Itanium 2 1.6-GHz CPUs (up to 4 processor modules for a total of 4 CPUs) or mx2 dual processor modules (up to 4 modules for a total of 8 CPUs)
- Cell controller ASIC (application specific integrated circuit)
- Main memory DIMMs (up to 32 DIMMs per board in 4 DIMM increments, using 512 MB, 1 GB, or 2-GB DIMMs - or some combination of both.)
- Voltage Regulator Modules (VRM)
- Data buses
- Optional link to 12 PCI-X I/O slots

Configuration

Crossbar Backplane

Each crossbar backplane contains two sets of two crossbar chips that provide a non blocking connection between eight cells and the other backplane. Each backplane cabinet can support up to eight cells. A backplane supporting four cells results in a 16 socket Superdome (16 way PA 8600/PA 8700 or 32 way PA 8800/PA-8900). Similarly, a backplane supporting eight cells would result in a 32 socket Superdome (32 way PA 8600/PA 8700 or 64 way PA 8800/PA-8900). Two backplanes can be linked together with flex cables to produce a cabinet that can support up to 16 cells resulting in a 64 socket Superdome (64 way PA 8600/PA 8700 or 128 way PA 8800/PA-8900 128 way).

I/O Subsystem

Each I/O chassis provides twelve I/O slots. Superdome PA 8600 and Superdome PA 8700 support I/O chassis with 12 PCI 66 capable slots, eight PCI 2x, supported via single (1x) ropes (266 MB/s peak) and four PCI 4x, supported via dual (1x) ropes (533 MB/s peak). Superdome PA 8600 and PA 8700 systems support PCI I/O chassis only. Superdome PA 8800/PA-8900 supports I/O chassis with 12 PCI X 133 capable slots, eight PCI 4x, supported via single enhanced (2x) ropes (533 MB/s peak) and four PCI X supported via dual enhanced (2x) ropes (1066 MB/s peak). Superdome PA-8800/PA-8900 will be shipped with PCI X I/O chassis, but supports both PCI and PCI X I/O chassis for in field upgrades.

- Each Superdome cabinet supports a maximum of four I/O chassis. The optional I/O expansion cabinet can support up to six I/O chassis
 - A 4 cell Superdome (16 socket) supports up to four I/O chassis for a maximum of 48 PCI X slots.
 - An 8 cell Superdome (32 socket) supports up to eight I/O chassis for a maximum of 96 PCI X slots. Four of these I/O chassis will reside in an I/O expansion cabinet.
 - A 16 cell Superdome (64 socket) supports up to sixteen I/O chassis for a maximum of 192 PCI X slots. Eight of these I/O chassis will reside in two I/O expansion cabinets (either six chassis in one I/O expansion cabinet and two chassis in the other, or four chassis in each).
-

Core I/O

The core I/O in Superdome provides the base set of I/O functions required by every Superdome partition. Each partition must have at least one core I/O card in order to boot. Multiple core I/O cards may be present within a partition (one core I/O card is supported per I/O backplane); however, only one may be active at a time. Core I/O will utilize the standard long card PCI-X form factor but will add a second card cage connection to the I/O backplane for additional non-PCI X signals (USB and utilities). This secondary connector will not impede the ability to support standard PCI-X cards in the core slot when a core I/O card is not installed.

Any I/O chassis can support a Core I/O card that is required for each independent partition. A system configured with 16 cells, each with its own I/O chassis and core I/O card could support up to 16 independent partitions. Note that cells can be configured without I/O chassis attached, but I/O chassis cannot be configured in the system unless attached to a cell.

Configuration

HP-UX Core I/O (A6865A)	<p>The core I/O card's primary functions are:</p> <ul style="list-style-type: none">• Partitions (console support) including USB and RS-232 connections• 10/100Base-T LAN (general purpose) <p>Other common functions, such as Ultra/Ultra2 SCSI, Fibre Channel, and Gigabit Ethernet, are not included on the core I/O card. These functions are, of course, supported as normal PCI-X add-in cards.</p> <p>The unified 100Base-T Core LAN driver code searches to verify whether there is a cable connection on an RJ-45 port or on an AUI port. If no cable connection is found on the RJ-45 port, there is a busy wait pause of 150 ms when checking for an AUI connection. By installing the loopback connector (description below) in the RJ-45 port, the driver would think an RJ-45 cable was connected and would not continue to search for an AUI connection, hence eliminate the 150 ms busy wait state:</p> <table><tr><th>Product/ Option Number</th><th>Description</th></tr><tr><td>A7108A</td><td>RJ-45 Loopback Connector</td></tr><tr><td>0D1</td><td>Factory integration RJ-45 Loopback Connector</td></tr></table>	Product/ Option Number	Description	A7108A	RJ-45 Loopback Connector	0D1	Factory integration RJ-45 Loopback Connector
Product/ Option Number	Description						
A7108A	RJ-45 Loopback Connector						
0D1	Factory integration RJ-45 Loopback Connector						
Windows Core I/O (A6865A and optional VGA/USB A6869A)	<p>For Windows Server 2003, Windows does not support the 10/100 LAN on the A6865A core I/O card, a separate Gigabit Ethernet card such as the A7061A, A7073A, A9899A or A9900A is required. The use of Graphics/USB card (A6869A) is optional and not required.</p>						
Linux Core I/O (A6865A)	<p>The core I/O card's primary functions are:</p> <ul style="list-style-type: none">• Partitions (console support) including USB and RS-232 connections• 10/100Base-T LAN (general purpose) <p>Other common functions, such as Ultra/Ultra2 SCSI, Fibre Channel, and Gigabit Ethernet, are not included on the core I/O card. These functions are supported as normal PCI-X add-in cards.</p>						
I/O Expansion Cabinet	<p>The I/O expansion functionality is physically partitioned into four rack-mounted chassis—the I/O expansion utilities chassis (XUC), the I/O expansion rear display module (RDM), the I/O expansion power chassis (XPC) and the I/O chassis enclosure (ICE). Each ICE supports up to two 12-slot PCI-X chassis.</p>						

Configuration

Field Racking

The only field rackable I/O expansion components are the ICE and the 12-slot I/O chassis. Either component would be field installed when the customer has ordered additional I/O capability for a previously installed I/O expansion cabinet.

No I/O expansion cabinet components will be delivered to be field installed in a customer's existing rack other than a previously installed I/O expansion cabinet. The I/O expansion components were not designed to be installed in racks other than Rack System E. In other words, they are not designed for Rosebowl I, pre-merger Compaq, Rittal, or other third-party racks.

The I/O expansion cabinet is based on a modified HP Rack System E and all expansion components mount in the rack. Each component is designed to install independently in the rack. The Rack System E cabinet has been modified to allow I/O interface cables to route between the ICE and cell boards in the Superdome cabinet. I/O expansion components are not designed for installation behind a rack front door. The components are designed for use with the standard Rack System E perforated rear door.

I/O Chassis Enclosure (ICE)

The I/O chassis enclosure (ICE) provides expanded I/O capability for Superdome. Each ICE supports up to 24 PCI-X slots by using two 12-slot Superdome I/O chassis. The I/O chassis installation in the ICE puts the PCI-X cards in a horizontal position. An ICE supports one or two 12-slot I/O chassis. The I/O chassis enclosure (ICE) is designed to mount in a Rack System E rack and consumes 9U of vertical rack space.

To provide online addition/replacement/deletion access to PCI or PCI-X cards and hot-swap access for I/O fans, all I/O chassis are mounted on a sliding shelf inside the ICE.

Four (N+1) I/O fans mounted in the rear of the ICE provide cooling for the chassis. Air is pulled through the front as well as the I/O chassis lid (on the side of the ICE) and exhausted out the rear. The I/O fan assembly is hot swappable. An LED on each I/O fan assembly indicates that the fan is operating.

Cabinet Height and Configuration Limitations

Although the individual I/O expansion cabinet components are designed for installation in any Rack System E cabinet, rack size limitations have been agreed upon. IOX Cabinets will ship in either the 1.6 meter (33U) or 1.96 meter (41U) cabinet. In order to allay service access concerns, the factory will not install IOX components higher than 1.6 meters from the floor. Open space in an IOX cabinet will be available for peripheral installation.

Peripheral Support

All peripherals qualified for use with Superdome and/or for use in a Rack System E are supported in the I/O expansion cabinet as long as there is available space. Peripherals not connected to or associated with the Superdome system to which the I/O expansion cabinet is attached may be installed in the I/O expansion cabinet.

Server Support

No servers except those required for Superdome system management such as Superdome Support Management Station or ISEE may be installed in an I/O expansion.

Peripherals installed in the I/O expansion cabinet cannot be powered by the XPC. Provisions for peripheral AC power must be provided by a PDU or other means.

Standalone I/O Expansion Cabinet

If an I/O expansion cabinet is ordered alone, its field installation can be ordered via option 750 in the ordering guide (option 950 for Platinum Channel partners).

Configuration

DVD Solution

The DVD solution for Superdome requires the following components. These components are required per partition. External racks A4901A and A4902A must also be ordered with the DVD solution. Note: One DVD is required and one DAT is recommended per nPartition.

NOTE: One DVD and one DAT is required per nPartition.

Superdome DVD Solutions

Description	Part Number	Option Number
PCI Ultra160 SCSI Adapter or PCI-X Dual channel Ultra160 SCSI Adapter	A6828A or A6829A	0D1
PCI Ultra160 SCSI Adapter or PCI X Dual channel Ultra 160 SCSI Adapter (Windows Server 2003, Red Hat RHEL AS 3, SUSE SLES 9)	A7059A or A7060A	0D1
Surestore Tape Array 5300	C7508AZ	
HP DVD+RW Array Module (one per partition) NOTE: The HP DVD-ROM Array Module for the TA5300 (C7499B) is replaced by HP DVD+RW Array Module (Q1592A) to provide customers with read capabilities for loading software from CD or DVD, DVD write capabilities for small amounts of data (up to 4 GB) and offline hot-swap capabilities. Windows supports using and reading from this device, but Windows does not support DVD write with this device.	Q1592A	0D1
DDS-4/DAT40 (DDS-5/DAT 72 is also supported. Product number is Q1524B) (one per partition)	C7497B	0D1
Jumper SCSI Cable for DDS-4 (optional) ¹	C2978B	0D1
SCSI cable 1-meter multi-mode VH-HD68	C2361B	0D1
SCSI Terminator	C2364A	0D1

¹0.5-meter HD HDT568 is required if DDS-4 or DDS-5 is used.

Partitions

Superdome can be configured with hardware partitions, (nPars). Given that HP UX 11i version 2, Windows Server 2003, SUSE SLES 9 and Red Hat (RHEL) AS 3 do not support virtual partitions (vPars), Superdome systems running HP UX 11i version 2, Windows Server 2003, Datacenter Edition, SUSE SLES 9 or Red Hat RHEL AS 3, do not support vPars.

A hardware partition (nPar) consists of one or more cells that communicate coherently over a high bandwidth, low latency crossbar fabric. Individual processors on a single-cell board cannot be separately partitioned. Hardware partitions are logically isolated from each other such that transactions in one partition are not visible to the other hardware partitions within the same complex.

Each nPar runs its own independent operating system. Different nPars may be executing the same or different revisions of an operating system, or they may be executing different operating systems altogether. Superdome supports HP UX 11i version 2, Windows Server 2003, Datacenter Edition, SUSE SLES 9 and Red Hat RHEL AS 3 operating systems. The diagram below shows a multi OS environment within Superdome.

NOTE: In mid-2005, it will be possible for PA-8800 and PA-8900 npars to co-exist with Itanium 2 1.6 GHz npars in the same Superdome system. Customers can install an Itanium 2 1.6 GHz npar to an HP 9000 Superdome running PA-8800 or PA-8900 (and vice-versa) in the field only. Factory orders for mixed Itanium and PA-RISC npars are not allowed.

Each nPar has its own independent CPUs, memory and I/O resources consisting of the resources of the cells that make up the partition. Resources (cell boards and/or I/O chassis) may be removed from one

Configuration

nPar and added to another without having to physically manipulate the hardware, but rather by using commands that are part of the System Management interface. The table below shows the maximum size of nPars per operating system:

	HP-UX 11i Version 2	Windows Server 2003	Red Hat RHEL AS 3	SUSE SLES 9
Maximum size of nPar	64 CPUs, 512 GB RAM	64 CPUs, 512 GB RAM	8 CPUs, 128 GB RAM	16 CPUs, 256 GB RAM
Maximum number of nPars	16	16	16	16

For information on type of I/O cards for networking and mass storage for each operating environment, please refer to the **Technical Specifications** section of this document. For licensing information for each operating system, please refer to the Ordering Guide.

Superdome supports static partitions. Static partitions imply that any nPar configuration change requires a reboot of the nPar. In a future HP-UX and Windows release, dynamic nPars will be supported. Dynamic npars imply that nPar configuration changes do not require a reboot of the nPar. Using the related capabilities of dynamic reconfiguration (i.e. on-line addition, on-line removal), new resources may be added to an nPar and failed modules may be removed and replaced while the nPar continues in operation. Adding new nPars to Superdome system does not require a reboot of the system.

Windows Server 2003, Datacenter edition for Itanium-based systems - HP Product Structure

Product Number **T2372A**

Pre-loaded Windows Server 2003, Datacenter Edition for Itanium 2 systems

Options:

- OD1 - factory integration
- B01 - on site installation at customer's location (must contact HP Services for a quote to install on-site!)
- ABA - English localization only (other languages, Ger, Fre, Ita available only as a special with extra lead time)
- ABJ - Japanese localization
- 002 - 2 processor LTU
- 004 - 4 processor LTU
- 008 - 8 processor LTU
- 016 - 16 processor LTU
- 032 - 32 processor LTU
- 064 - 64 processor LTU

Single System Reliability/Availability Features

Superdome high availability offering is as follows:

NOTE: Online addition/replacement for cell boards is not currently supported and will be available in a future HP-UX release. Online addition/replacement of individual CPUs and memory DIMMs will never be supported.)

- **CPU:** The features below nearly eliminate the down time associated with CPU cache errors (which are the majority of CPU errors). If a CPU is exhibiting excessive cache errors, HP-UX 11i version 2 will ONLINE activate to take its place. Furthermore, the CPU cache will automatically be repaired on reboot, eliminating the need for a service call.
 - Dynamic processor resilience w/ Instant Capacity enhancement. **NOTE:** Dynamic processor resilience and Instant Capacity are not supported when running Windows Server 2003 SUSE SLES 9 or Red Hat RHEL AS 3 in the partition.
 - CPU cache ECC protection and automatic de allocation

Configuration

- CPU bus parity protection
 - Redundant DC conversion
- **Memory:** The memory subsystem design is such that a single SDRAM chip does not contribute more than 1 bit to each ECC word. Therefore, the only way to get a multiple-bit memory error from SDRAMs is if more than one SDRAM failed at the same time (rare event). The system is also resilient to any cosmic ray or alpha particle strike because these failure modes can only affect multiple bits in a single SDRAM. If a location in memory is "bad", the physical page is deallocated dynamically and is replaced with a new page without any OS or application interruption. In addition, a combination of hardware and software scrubbing is used for memory. The software scrubber reads/writes all memory locations periodically. However, it does not have access to "locked down" pages. Therefore, a hardware memory scrubber is provided for full coverage. Finally data is protected by providing address/control parity protection.
 - Memory DRAM fault tolerance, i.e. recovery of a single SDRAM failure
 - DIMM address / control parity protection
 - Dynamic memory resilience, i.e. page de allocation of bad memory pages during operation.
NOTE: Dynamic memory resilience is not supported when running Windows Server 2003, SUSE SLES 9 or Red Hat RHEL AS 3 in the partition.
 - Hardware and software memory scrubbing
 - Redundant DC conversion
 - Cell ICAP.
NOTE: Cell ICAP is not supported when Windows Server 2003 SUSE SLES 9 or Red Hat RHEL AS 3 is running in the partition.
- **I/O:** Partitions configured with dual path I/O can be configured to have no shared components between them, thus preventing I/O cards from creating faults on other I/O paths. I/O cards in hardware partitions (nPars) are fully isolated from I/O cards in other hard partitions. It is not possible for an I/O failure to propagate across hard partitions. It is possible to dynamically repair and add I/O cards to an existing running partition.
 - Full single-wire error detection and correction on I/O links
 - I/O cards fully isolated from each other
 - HW for the Prevention of silent corruption of data going to I/O
 - On-line addition/replacement (OLAR) for individual I/O cards, some external peripherals, SUB/HUB.
NOTE: Online addition/replacement (OLAR) is not supported when running Red Hat RHEL AS 3, or SUSE SLES 9 in the partition.
 - Parity protected I/O paths
 - Dual path I/O
- **Crossbar and Cabinet Infrastructure:**
 - Recovery of a single crossbar wire failure
 - Localization of crossbar failures to the partitions using the link
 - Automatic de-allocation of bad crossbar link upon boot
 - Redundant and hotswap DC converters for the crossbar backplane
 - ASIC full burn-in and "high quality" production process
 - Full "test to failure" and accelerated life testing on all critical assemblies
 - Strong emphasis on quality for multiple-nPartition single points of failure (SPOFs)
 - System resilience to Management Processor (MP)
 - Isolation of nPartition failure
 - Protection of nPartitions against spurious interrupts or memory corruption
 - Hot swap redundant fans (main and I/O) and power supplies (main and backplane power bricks)
 - Dual power source
 - Phone-Home capability
- **"HA Cluster-In-A-Box" Configuration:** The "HA Cluster-In-A-Box" allows for failover of users' applications between hardware partitions (nPars) on a single Superdome system. All providers of

Configuration

mission critical solutions agree that failover between clustered systems provides the safest availability-no single points of failures (SPOFs) and no ability to propagate failures between systems. However, HP supports the configuration of HA cluster software in a single system to allow the highest possible availability for those users that need the benefits of a non-clustered solution, such as scalability and manageability. Superdome with this configuration will provide the greatest single system availability configurable. Since no single system solution in the industry provides protection against a SPOF, users that still need this kind of safety and HP's highest availability should use HA cluster software in a multiple system HA configuration. Multiple HA software clusters can be configured within a single Superdome system (i.e., two 4-node clusters configured within a 32-socket Superdome system).

- HP-UX: Serviceguard and Serviceguard Extension for RAC
- Windows Server 2003: Microsoft Cluster Service (MSCS) - limited configurations supported
- Red Hat Enterprise Linux AS 3 and SUSE SLES 9: Serviceguard for Linux

Multi-system High Availability

HP-UX 11i v2

Any Superdome partition that is protected by Serviceguard or Serviceguard Extension for RAC can be configured in a cluster with:

- Another Superdome with like processors (i.e. Both Superdomes must have Itanium 2 1.5 GHz processors or both Superdomes must have mx2 processor modules in the partitions that are to be clustered together.)
- One or more standalone non Superdome systems with like processors
- Another partition within the same single cabinet Superdome (refer to "HA Cluster-in-a-Box" above for specific requirements) that has like processors

Separate partitions within the same Superdome system can be configured as part of different Serviceguard clusters.

Geographically Dispersed Cluster Configurations

The following Geographically Dispersed Cluster solutions fully support cluster configurations using Superdome systems. The existing configuration requirements for non-Superdome systems also apply to configurations that include Superdome systems. An additional recommendation, when possible, is to configure the nodes of cluster in each datacenter within multiple cabinets to allow for local failover in the case of a single cabinet failure. Local failover is always preferred over a remote failover to the other datacenter. The importance of this recommendation increases as the geographic distance between datacenters increases.

- Extended Campus Clusters (using Serviceguard with MirrorDisk/UX)
- MetroCluster with Continuous Access XP
- MetroCluster with EMC SRDF
- ContinentalClusters

From an HA perspective, it is always better to have the nodes of an HA cluster spread across as many system cabinets (Superdome and non-Superdome systems) as possible. This approach maximizes redundancy to further reduce the chance of a failure causing down time.

Windows Server 2003, Datacenter Edition for Itanium 2 systems

Microsoft Cluster Service (MSCS) comes standard with Windows Server 2003. When a customer orders T2372A, Windows Server 2003, Datacenter edition for Itanium 2 systems, it includes Microsoft Cluster Service - there is no additional SKU or charge for this Windows Server 2003 functionality. MSCS does not come preconfigured from HP's factories, however, so it is recommended that if your customer is interested in a MSCS configuration with Integrity Superdome, HP Services be engaged for a statement of work to configure MSCS on Integrity Superdome with HP storage.

Configuration

HP Storage is qualified and supported with MSCS clusters. HP storage arrays tested and qualified with MSCS clusters on Superdome are:

- EVA 3000 v3.01
- EVA 5000 v3.01
- XP 48/512
- XP 128/1024.
- XP12000
- MSA1000

In addition, the following EMC storage arrays are supported with MSCS:

- EMC CLARiiON FC4700
- EMC CLARiiON CX200/CX400/CX600
- EMC CLARiiON CX300/CX500/CX700
- EMC Symmetrix 8000 Family
- EMC DMX 800/1000/2000/3000

HP has qualified and supports the following capabilities with Integrity Superdome and MSCS:

- Active/Active and Active/Passive MSCS clusters
- Partition size: any size from 2 CPUs up to 64 CPUs can be in a cluster
- HP supports anywhere from 2 nodes in an MSCS cluster with Superdome to 8 nodes
- Cluster nodes can be within the same Superdome cabinet or between different Superdome cabinets co-located at the same site
- MSCS clusters can be between similar partitions of CPU capacity (i.e. 8CPU partition clustered to 8CPU partition, 16CPU partition clustered to 16CPU partition)
- MSCS clusters can be also be between dissimilar partitions of CPU capacity (i.e. 16CPU partition clustered to 8CPU partition, 32CPU partition clustered to 16CPU partition) Please note, however, that you and the customer should work with HP Support to determine the appropriate configuration based on the availability level that is needed by the customer. As an example, if the customer wants a Service Level Agreement based on application availability, then perhaps an exact mirror of the production partition be set up for failover (i.e. similar CPU capacity). In any event, please ensure that the proper amount of hardware resources on the target server is available for failover purposes.
- HP Cluster Extension XP is a disaster recovery solution that extends local clusters over metropolitan-wide distance. It now supports MSCS on Windows Integrity with XP48/XP512, XP128/XP1024, XP12000.

For high availability purposes with MSCS, it is recommended (but not required) that customers also use HP SecurePath software (v4.0c SP1) with HP storage for multi pathing and load balancing capabilities in conjunction with the fiber channel HBA, AB466A or AB467A. Additionally, the NCU (NIC Configuration Utility), which is provided from HP on the SmartSetup CD that ships with Windows partitions, can also be used in conjunction with MSCS clusters with the HP supported Windows NIC cards.

Additionally, customers can see the completion of our certification for the Microsoft Windows catalog at the following URL: <http://www.microsoft.com/windows/catalog/server/default.aspx?subID=22&xslt=cataloghome&pgn=catalogHome>

Microsoft requires hardware vendors to complete this certification - also called "Windows logo-ing."

Configuration

Below is the ordering information for Windows Server 2003 Datacenter Edition.

Windows Server 2003 Datacenter edition (for Itanium 2 based HP Integrity Superdome only)	
<p>To order a system with Windows Server 2003 Datacenter Edition, you must order the T2372A product number with English or Japanese localization (option ABA or ABJ), and the appropriate license to use option code (002 through 064). Windows Server 2003 Datacenter Edition license options should be ordered to accommodate the total number of processors running Windows in the system. Order the fewest option numbers possible for the total license number. For example if there are a total of 24 processors in the system running Datacenter, order options 016 and 008. Datacenter can be partitioned (npars only) into any number of instances, but is limited to one OS image per npar.</p> <p>NOTE 1: Windows Server 2003 Datacenter Edition should be installed with assistance from HP. If factory installation is selected, then a qualified Windows storage device must be ordered and an A9890A, AB466A or AB467A card must be ordered. There must be at least one boot drive for each partition. Two drives are required for RAID 1; one drive is required for RAID 0 or no RAID.</p> <p>NOTE 2: Can not order more than one of the same license options.</p> <p>NOTE 3: Windows only supports a maximum of 64 processors per partition.</p>	
Microsoft® Windows® Server 2003 Datacenter Edition for Itanium 2 Systems	T2372A
English Localization	ABA
Japanese Localization	ABJ
Factory Integration	0D1
Include with complete system	B01
2 processor license to use	002
4 processor license to use	004
8 processor license to use	008
16 processor license to use	016
32 processor license to use	032
64 processor license to use	064
HP Standalone Operating System for field install. Windows Server 2003 Datacenter Edition Stand-alone for use when adding licenses to an existing server or replacing another operating system on a Datacenter qualified server. 0D1 (factory integration) is the default operating system installation method and should be used whenever possible. Must be ordered with the appropriate number of licenses (LTU, for example T2372A-016 for 16 Windows Server 2003 Datacenter licenses. There must be a Windows Server 2003 Datacenter Edition processor license for each processor in an Integrity server running Windows. When ordering T2372A-501, the appropriate on-site HP Services installation options will be added to the order.	501

Configuration

Network Adapter Teaming with Windows Server 2003

Windows Server 2003 supports NCU, NIC Configuration Utility. This is the same NCU that is available to ProLiant customers. This NCU has been ported to 64 bit Windows Server 2003 and is included with every SmartSetup CD that comes with a Windows partition on Integrity Superdome.

All ProLiant Ethernet network adapters support the following three types of teaming:

- NFT—Network Fault Tolerance
- TLB—Transmit Load Balancing
- SLB—Switch-assisted Load Balancing

For Windows Server 2003, Datacenter edition on Superdome, there are four network interface cards that are currently supported (thus, these are the only cards that can be teamed with this NCU):

Windows/Linux PCI 1000Base-T Gigabit Ethernet Adapter (Copper)	A7061A
Windows/Linux PCI 1000Base-SX Gigabit Ethernet Adapter (Fiber)	A7073A
Windows/Linux PCI 2 port 1000Base-T Gigabit Ethernet Adapter (Copper)	A9900A
Windows/Linux PCI 2 port 1000Base-T Gigabit Ethernet Adapter (Fiber)	A9899A

Also, note that teaming between the ports on a single A9900A or A9899A above is supported by the NCU.

Red Hat RHEL AS 3 and SUSE SLES 9

Support of Serviceguard and Cluster Extension on Red Hat RHEL AS 3 and SUSE SLES 9 should be available in late 2004 or early 2005.

Management Features

Integrity Superdome now supports the Console and Support Management Station in one device.

Service Processor (MP)

The service processor (MP) utility hardware is an independent support system for nPartition servers. It provides a way for you to connect to a server complex and perform administration or monitoring tasks for the server hardware and its nPartitions. The main features of the service processor include the Command menu, nPartition consoles, console logs, chassis code viewers, and partition Virtual Front Panels (live displays of nPartition and cell states).

Access to the MP is restricted by user accounts. Each user account is password protected and provides a specific level of access to the Superdome complex and service processor commands. Multiple users can independently interact with the service processor because each service processor login session is private. Up to 16 users can simultaneously log in to the service processor through its network (customer LAN) interface and they can independently manage nPartitions or view the server complex hardware states. Two additional service processor login sessions can be supported by the local and remote serial ports. These allow for serial port terminal access(through the local RS-232 port) and external modem access (through the remote RS-232 port).

In general, the service processor (MP) on Superdome servers is similar to the service processor on other HP servers, while providing enhanced features necessary for managing a multiple-nPartition server. For example, the service processor manages the complex profile, which defines nPartition configurations as well as complex-wide settings for the server. The service processor also controls power, reset, and TOC capabilities, displays and records system events (chassis codes), and can display detailed information about the various internal subsystems.

Configuration

Functional capabilities

The primary features available through the service processor are:

- The Service Processor Command Menu: provides commands for system service, status, access configuration, and manufacturing tasks.
- Partition Consoles: Each nPartition in a server complex has its own console. Each nPartition's console provides access to Boot Console Handler (BCH) interface and the HP-UX console for the nPartition.
- Console Logs: Each nPartition has its own console log, which has a history of the nPartition console's output, including boot output, BCH activity, and any HP-UX console login activity.
- Chassis Logs Viewers (Live and Recorded Chassis Codes): Three types of chassis code log views are available: activity logs, error logs, and live chassis code logs.
- Virtual Front Panels: Each nPartition's Virtual Front Panel (VFP) displays real-time status of the nPartition boot status and activity, and details about all cells assigned to the nPartition. The VFP display automatically updates as cell and nPartition status changes.

Support Management Station (SMS)

The Support Management Station (SMS) runs the Superdome scan tools that enhance the diagnosis and testability of Superdome. The SMS and associated tools also provide for faster and easier upgrades and hardware replacement.

The purpose of the SMS is to provide Customer Engineers with an industry leading set of support tools, and thereby enable faster troubleshooting and more precise problem root cause analysis. It also enables remote support by factory experts who consult with and back up the HP Customer Engineer. The SMS complements the proactive role of HP's Instant Support Enterprise Edition (ISEE) that is offered to Mission Critical customers by focusing on reactive diagnosis for both mission critical and non mission critical Superdome customers.

The user of the SMS is the HP Customer Engineer and HP Factory Support Engineer. The Superdome customer benefits from their use of the SMS by receiving faster return to normal operation of their Superdome server and improved accuracy of fault diagnosis, resulting in fewer callbacks. HP can offer better service through reduced installation time.

Functional Capabilities: The SMS basic functional capabilities are:

- Remote access via customer LAN
- Modem access (PA-8800/PA-8900 SMS only)
- Ability to be disconnected from the Superdome platform(s) and not disrupt their operation.
- Ability to connect a new Superdome platform to the SMS and be recognized by scan software.
- Support for up to sixteen Superdome systems
- Ability to support multiple, heterogeneous Superdome platforms (scan software capability).
- System scan and diagnostics
- Utility firmware updates
- Enhanced IPMI logging capabilities (Windows-based ProLiant SMS only)

Configuration

Console Access

The optimal configuration of console device(s) depends on a number of factors, including the customer's data center layout, console security needs, customer engineer access needs, and the degree with which an operator must interact with server or peripheral hardware and a partition (i.e. changing disks, tapes). This section provides a few guidelines. However the configuration that makes best sense should be designed as part of site preparation, after consulting with the customer's system administration staff and the field engineering staff.

Customer data centers exhibit a wide range of configurations in terms of the preferred physical location of the console device. (The term "console device" refers to the physical screen/keyboard/mouse that administrators and field engineers use to access and control the server.) The Superdome server enables many different configurations by its flexible configuration of access to the MP, and by its support for multiple geographically distributed console devices.

Three common data center styles are:

- The secure site where both the system and its console are physically secured in a small area.
- The "glass room" configuration where all the systems' consoles are clustered in a location physically near the machine room.
- The geographically dispersed site, where operators administer systems from consoles in remote offices.

These can each drive different solutions to the console access requirement.

The considerations listed below apply to the design of provision of console access to the server. These must be considered during site preparation.

- The Superdome server can be operated from a VT100 or an hpterm compatible terminal emulator. However some programs (including some of those used by field engineers) have a more friendly user interface when operated from an hpterm.
- LAN console device users connect to the MP (and thence to the console) using terminal emulators that establish telnet connections to the MP. The console device(s) can be anywhere on the network connected to either port of the MP.
- Telnet data is sent between the client console device and the MP "in the clear", i.e. unencrypted. This may be a concern for some customers, and may dictate special LAN configurations.
- If an HP-UX workstation is used as a console device, an hpterm window running telnet is the recommended way to connect to the MP. If a PC is used as a console device, Reflection1 configured for hpterm emulation and telnet connection is the recommended way to connect to the MP.
- The MP currently supports a maximum of 16 telnet-connected users at any one time.
- It is desirable, and sometimes essential for rapid time to repair to provide a reliable way to get console access that is physically close to the server, so that someone working on the server hardware can get immediate access to the results of their actions. There are a few options to achieve this:
 - Place a console device close to the server.
 - Ask the field engineer to carry in a laptop, or to walk to the operations center.
 - Use a system that is already in close proximity of the server such as the Instant Support Enterprise Edition (ISEE) or the System Management Station as a console device close to the system.
 - The system administrator is likely to want to run X-applications or a browser using the same client that they access the MP and partition consoles with. This is because the partition configuration tool, *parmgr*, has a graphical interface. The system administrator's console device(s) should have X-window or browser capability, and should be connected to the system LAN of one or more partitions.

Configuration

Functional capabilities

- Local console physical connection (RS-232)
- Display of system status on the console (Front panel display messages)
- Console mirroring between LAN and RS-232 ports
- System hard and soft (TOC or INIT) reset capability from the console.
- Password secured access to the console functionality
- Support of generic terminals (i.e. VT100 compatible).
- Power supply control and monitoring from the console. It will be possible to get power supply status and to switch power on/off from the console.
- Console over the LAN. This means that a PC or HP workstation can become the system console if properly connected on the customer LAN. This feature becomes especially important because of the remote power management capability. The LAN will be implemented on a separate port, distinct from the system LAN, and provide TCP/IP and Telnet access.
- There is one MP per Superdome cabinet, thus there are two (2) for Superdome 64-socket. But one, and only one, can be active at a time. There is no redundancy or failover feature.

Windows Server 2003

For Windows Server 2003 customers desiring uninterrupted visibility to the Superdome Windows partition, it is recommended that customers purchase an IP console solution separately to view the partition while the OS is rebooting (in addition to normal Windows desktop if desired). Windows Terminal Services (standard in Windows Server 2003) should be the recommended method to provide remote access, but is lacking in displaying VGA output during reboot.

For customers who mandate VGA access during reboot, the IP console switch (262586-B21), used in conjunction with a VGA/USB card in the partition (A6869A) is the solution. These IP console solutions are available "off the shelf" with resellers or the ProLiant supply chain.

The features of this switch are as follows:

- Provides keyboard, video and mouse (KVM) connections to 16 direct attached Windows partitions (or servers) - expandable to 128.
- Allows access to partitions (or servers) from a remote centralized console.
- 1 for local KVM
- 3 concurrent remote users (secure SSL data transfer across network)
- Single screen switch management with the IP Console Viewer Software:
 - Authentication
 - Administration
 - Client Software

If the full graphical console access is needed, the following must be ordered with the Integrity Superdome purchase (it will not be integrated in the factory, but will ship with the system):

Component	Product Number
3×1×16 IP console switch (100 240V)-1 switch per 16 OS instances (n<=16), each connected to VGA card	262586-B21
8 to 1 console expander-Order expander if there are more than 16 OS instances	262589-B21
USB interface adapters-Order one per OS instance	336047-B21
CAT5 cable-Order one per OS instance	

For additional information, please visit:

<http://h18004.www1.hp.com/products/servers/proliantstorage/rack-options/kvm/index-console.html>

Configuration

Support

The following matrix describes the supported SMS and recommended console devices for all Superdomes.

SMS and Console Support Matrix

	SMS	Console
PA 8700 (pre March 1, 2004)	Legacy UNIX SMS ¹	PC/workstation
PA 8700 (post March 1, 2004)	UNIX rx2600 bundle	TFT5600 + Ethernet switch
PA 8700 upgraded to Integrity or PA-8800/PA-8900	Legacy UNIX SMS with software upgrade ²	PC/workstation
	UNIX rx2600 bundle ³	TFT5600 + Ethernet switch
	Windows SMS/Console (ProLiant ML350)	
Integrity or PA-8800/PA-8900	Windows SMS/Console (ProLiant ML350)	
	UNIX SMS/Console (rx2600)	

¹ A legacy UNIX SMS could be an A400, A500, rp2430 or rp2470 bundle, depending on when it was ordered

² In order for a legacy SMS to be upgraded to support Integrity or PA8800/PA-8900, it must be running HP-UX 11.0 or later, as sx1000 scan tools are not supported on HP-UX 10.20.

³ rx2600 SMS bundles ordered and installed prior to October 2004 will require a software upgrade in order to support an sx1000-based Superdome. As of October 2004, all rx2600 SMS bundles support PA8800/PA-8900 and Integrity Superdomes without this upgrade.

Hardware Requirements

There are two alternatives for Integrity Superdome: a Windows ProLiant SMS/Console or a UNIX rx2600 SMS/Console.

The UNIX rx2600 SMS bundle is comprised of:

- HP rx2600 1.0G 1.5MB CPU server Solution
- Factory rack kit for rx2600
- 1GB DDR memory
- 36GB 15K HotPlug Ultra320 HDD
- HP-UX 11iv2 Foundation OE
- 1 x HP Tape Array 5300 with DVD-ROM and DAT 40
- HP ProCurve Switch 2124
- CAT 5e Cables

By default, the rx2600 SMS does not come with a display monitor or keyboard unless explicitly ordered to enable console access (the TFT5600 rackmounted display/mouse/keyboard is the recommended solution). See the ordering guide for details on the additional components that are required in order to use the rx2600 SMS as a console.

The Windows ProLiant SMS:

- Allows local access to SMS by CE.
- Provides integrated console access, providing hpterm emulation over telnet and web browser, connecting over LAN or serial to a Superdome system
- Provides remote access over a LAN or dialup connection:
- ftp server with capability to ftp the firmware files and logs
- dialup modem access support (i.e., PC Anywhere or VNC)
- Provides seamless integration with data center level management.
- Provides partition logon capability, providing hpterm emulation over telnet, X windows, and

Configuration

Windows Terminal Services capabilities.

- Provides following diagnostics tools:
- Runs HP's proven highly effective JTAG scan diagnostic tools, which offer rapid fault resolution to the failing wire.
- Console log storage and viewing
- Event log storage and viewing
- Partition and memory adviser flash applications
- Supports updating platform and system firmware.
- Always on event and console logging for Superdome systems, which captures and stores very long event and console histories, and allows HP specialists to analyze the first occurrence of a problem.
- Allows more than one LAN connected response center engineer to look at SMS logs simultaneously.
- Can be disconnected from the Superdome systems and not disrupt their operation.
- Provides ability to connect a new Superdome system to the SMS and be recognized by scan software.
- Scans one Superdome system while other Superdome systems are connected (and not disrupt the operational systems).
- Supports multiple, heterogeneous Superdome platforms.

The Windows ProLiant SMS/Console is comprised of a ProLiant ML350 G3/G4 and a TFT5600 retractable display monitor/keyboard/mouse to enable console access. This solution also requires (and includes) a switch. This is because scan diagnostics will not work properly if more than one IP address exists on the ProLiant SMS/Console. An important difference between the UNIX rx2600 SMS and the Windows ProLiant SMS/Console is that the ProLiant SMS, by default, provides console functionality whereas the UNIX rx2600 SMS does not. The TFT5600 retractable display/keyboard which is an optional add-on for the UNIX-based rx2600 SMS, is included by default with the Windows ProLiant SMS.

Additionally, the Windows ProLiant SMS/Console includes an internal modem that is intended for connection to a phone line. This is for cases in which the Customer does not want the SMS to be on a public network, and HP Field Services needs to access the SMS (they would then access the SMS via the phone line and PCAnywhere.)

A customer may not substitute any PC running Windows Server 2000 SP4 for the ProLiant SMS/Console due to the specialized software applications that have been qualified on the hardware and OS. Utilizing any other device as the SMS will void the warranty on the Superdome system and degrade the ability to service the system.

The Windows ProLiant SMS bundle is comprised of:

- 1 x HP ProLiant server ML350 G3/G4
- 1 x Intel Xeon™ DP 3.06 GHz CPU
- 2 x 256MB
- 36GB 10K U320 HDD
- 1 x internal DVD
- 1 x internal V.90 56K modem with phone cord
- Windows 2000 Server SP4
- 2 x 25' CAT5e cables
- 1 x 4' CAT5e cable
- Ethernet switch and jumper cord
- Retractable display/keyboard/mouse
- Third-party applications

NOTE: If full graphical access to the SMS is needed, the PS/2 Interface Adapter (262588 B21) will allow the SMS to share the IP Console Switch with other OS instances.

Configuration

Software Requirements

All SMS software is preloaded in the factory and delivered to the customer as a complete solution.

The UNIX rx2600 SMS supports only HP UX 11i at this time. Current versions of the SMS software have not been qualified for 64 bit Windows.

The Windows ProLiant SMS/Console will run Windows 2000 SP4 as the default operating system. The ProLiant SMS/Console will follow the Windows OS roadmap and support later versions of this operating system as needed. The version of the scan tools used on the sx1000 Superdomes also does not require scan traffic to be isolated from console traffic.

SMS/Console Connectivity

The UNIX rx2600 SMS requires the addition of a retractable display/keyboard in order to provide console access to Integrity Superdome.

Console capabilities are integrated with the Windows ProLiant SMS solution. The ProLiant SMS includes the necessary display, keyboard and mouse, and only one LAN port on the MP is required to be connected. The Windows ProLiant SMS can support and connect to either of the MP LAN interfaces (known as the Private and Customer LAN ports). Both LAN ports on the MP have identical functionality so there is no preference in using one over the other. Only one IP port on the Superdome MP is required to be connected to the ProLiant SMS. Since scan and console traffic can co-exist on the same network, only one IP address exists (and is supported) on the ProLiant SMS.

The Integrity Superdome scan tools use TCP/IP, not UDP, for scan diagnostics. Therefore it is not necessary to isolate scan and console traffic on Integrity Superdomes.

The Core I/O cards from each nPar can optionally be connected to the Ethernet switch in order to facilitate graphical console functionality (i.e., parmgr). However, security concerns may dictate that a partition NIC not be connected to the management LAN. Alternatives are to access from a management station to a partition LAN through a secure router, or to use text mode access to commands via the console.

Additional Integrity Superdomes can be added to this configuration. Each new Integrity Superdome will require only one CAT5e LAN cable for connection of the Customer/Private LAN port on the Superdome MP to the existing switch.

Customers using the UNIX rx2600 SMS solution for Integrity Superdome can also use the rx2600 as a console device. In order to use the UNIX rx2600 SMS as a console for Integrity Superdome, the only component that must be ordered is the TFT5600 retractable keyboard/display/mouse. See the ordering guide for more details.

Additional Integrity Superdomes require only a CAT5e LAN cable for connection of the Private/Customer LAN port to the existing switch. PA-8700 Superdomes can also be added to this configuration, but require separate scan & console networks. Details on mixed Superdome environments follow later in this section.

Windows Terminal Services (standard in Windows Server 2003) should be the recommended method to provide remote access for Windows partitions, but is lacking in displaying VGA output during reboot. For customers who mandate VGA access during reboot, configure the IP console switch (262586 B21) used in conjunction with a VGA/USB card in the partition (A6869A).

Configuration

Mixed Superdome Environments

Some important rules regarding SMS/Console support in mixed Superdome environments:

1. PA-8700 Superdomes require scan and console traffic to be isolated on separate networks
2. Integrity Superdomes do not require scan and console traffic to be isolated on separate networks
3. The Windows ProLiant SMS cannot be used to manage PA-8700 Superdomes
4. The UNIX rx2600 SMS can be used to manage all current models of Superdome
5. A legacy UNIX SMS can manage Integrity Superdomes as long as it undergoes a software upgrade and is running HP-UX 11.0

Upgrading a PA-8700 Superdome to Integrity

Upgrading a PA-8700 Superdome to Integrity

Once a PA-8700 Superdome has been upgraded to Integrity, a software upgrade must be performed on the SMS in order to have the correct scan tools for the sx1000 chipset. Alternatively, a new Windows ProLiant SMS or a UNIX rx2600 SMS can be ordered.

After performing the software upgrade, scan and console traffic from the SMS to the newly upgraded Superdome can co-exist on the same network. Note that if there are other PA-8700 Superdomes still connected to the SMS, those Superdomes will still require the two separate networks (see Adding a PA-8800/PA-8900 Superdome to a PA-8700 Environment, below).

Adding an Integrity Superdome to a PA-8700 Environment

When adding an Integrity Superdome to a PA-8700 environment, the Customer can choose to purchase a new SMS/Console (either the Windows or UNIX version) to manage the new Integrity Superdome, and continue to use their existing legacy SMS to manage the PA-8700 Superdomes.

A simpler solution is to upgrade the software on the legacy UNIX SMS so that it may manage the new Integrity Superdome. The upgraded UNIX SMS is able to determine which Superdomes are PA-8700 and which are Integrity, and will separate scan traffic from console traffic on the PA-8700 Superdomes.

To support this, the separate scan and console networks should be maintained for all PA-8700 Superdomes. The new Integrity Superdome requires only one connection to the SMS from its Private/Customer LAN port on the MP.

System Management Features

HP-UX

- **HP-UX Servicecontrol Manager** is the central point of administration for management applications that address the configuration, fault, and workload management requirements of an adaptive infrastructure.
- **Servicecontrol Manager** maintains both effective and efficient management of computing resources. It integrates with many other HP-UX-specific system management tools, including the following, which are available on Itanium 2 based servers:
- **Ignite-UX**-Ignite-UX addresses the need for HP-UX system administrators to perform fast deployment for one or many servers. It provides the means for creating and reusing standard system configurations, enables replication of systems, permits post-installation customizations, and is capable of both interactive and unattended operating modes.
- **Software Distributor (SD)** is the HP-UX administration tool set used to deliver and maintain HP-UX operating systems and layered software applications. Delivered as part of HP-UX, SD can help you manage your HP-UX operating system, patches, and application software on HP Itanium2-based servers.
- **System Administration Manager (SAM)** is used to manage accounts for users and groups, perform auditing and security, and handle disk and file system management and peripheral device management. Servicecontrol Manager enables these tasks to be distributed to multiple systems and

Configuration

delegated using role based security.

- **HP-UX Kernel Configuration**-for self-optimizing kernel changes. The new HP-UX Kernel Configuration tool allows users to tune both dynamic and static kernel parameters quickly and easily from a Web based GUI to optimize system performance. This tool also sets kernel parameter alarms that notify you when system usage levels exceed thresholds.
- **Partition Manager** creates and manages nPartitions-hard partitions for high-end servers. Once the partitions are created, the systems running on those partitions can be managed consistently with all the other tools integrated into Servicecontrol Manager. Key features include:
 - Easy-to-use, familiar graphical user interface.
 - Runs locally on a partition, or remotely. The Partition Manager application can be run remotely on any system running HP-UX 11i Version 2 and eventually select Windows releases and remotely manage a complex either by 1) communicating with a booted OS on an nPartition in the target complex via WBEM, or 2) communicating with the service processor in the target complex via IPMI over LAN. The latter is especially significant because a complex can be managed with NONE of the nPartitions booted.
 - Full support for creating, modifying, and deleting hardware partitions.
 - Automatic detection of configuration and hardware problems.
 - Ability to view and print hardware inventory and status.
 - Big picture views that allow system administrators to graphically view the resources in a server and the partitions that the resources are assigned to.
 - Complete interface for the addition and replacement of PCI devices.
 - Comprehensive online help system.
- **Security Patch Check** determines how current a systems security patches are, recommends patches for continuing security vulnerabilities and warns administrators about recalled patches still present on the system.
- **System Inventory Manager** is for change and asset management. It allows you to easily collect, store and manage inventory and configuration information for HP-UX based servers. It provides an easy-to-use, Web-based interface, superior performance, and comprehensive reporting capabilities
- **Event Monitoring Service (EMS)** keeps the administrator of multiple systems aware of system operation throughout the cluster, and notifies the administrator of potential hardware or software problems before they occur. HP Servicecontrol Manager can launch the EMS interface and configure EMS monitors for any node or node group that belongs to the cluster, resulting in increased reliability and reduced downtime.
- **Process Resource Manager (PRM)** controls the resources that processes use during peak system load. PRM can manage the allocation of CPU, memory resources, and disk bandwidth. It allows administrators to run multiple mission critical applications on a single system, improve response time for critical users and applications, allocate resources on shared servers based on departmental budget contributions, provide applications with total resource isolation, and dynamically change configuration at any time-even under load. (fee based)
- **HP-UX Workload Manager (WLM)** A key differentiator in the HP-UX family of management tools, Workload Manager provides automatic CPU resource allocation and application performance management based on prioritized service-level objectives (SLOs). In addition, WLM allows administrators to set real memory and disk bandwidth entitlements (guaranteed minimums) to fixed levels in the configuration. The use of workload groups and SLOs improves response time for critical users, allows system consolidation, and helps manage user expectations for performance. (Fee-based)
- **HP's Management Processor** enables remote server management over the Web regardless of the system state. In the unlikely event that none of the nPartitions are booted, the Management Processor can be accessed to power cycle the server, view event logs and status logs, enable console redirection, and more. The Management Processor is embedded into the server and does not take a PCI slot. And, because secure access to the Management Processor is available through SSL encryption, customers can be confident that its powerful capabilities will be available only to authorized administrators. New features that will be available include:
 - Support for Web Console that provides secure text mode access to the management

Configuration

- processor
 - Reporting of error events from system firmware.
 - Ability to trigger the task of PCI OL* from the management processor.
 - Ability to scan a cell board while the system is running. (only available for partitionable systems)
 - Implementation of management processor commands for security across partitions so that partitions do not modify system configuration (only available for partitionable systems).
- **OpenView Operations Agent**-collects and correlates OS and application events (fee based)
- **OpenView Performance Agent**-determines OS and application performance trends (fee based)
- **OpenView GlancePlus**-shows real time OS and application availability and performance data to diagnose problems (fee based)
- **OpenView Data Protector** (Omniback II)-backs up and recovers data (fee based)

In addition, the Network Node Manager (NNM) management station will run on HP-UX Itanium 2 based servers. NNM automatically discovers, draws (maps), and monitors networks and the systems connected to them.

All other OpenView management tools, such as OpenView Operations, Service Desk, and Service Reporter, will be able to collect and process information from the agents running on Itanium 2-based servers running HP-UX.

Windows Server 2003, Datacenter Edition

- **The HP Essentials Foundation Pack for Windows** is a complete toolset to install, configure, and manage Itanium2 servers running Windows. Included in the Pack is the Smart Setup DVD which contains all the latest tested and compatible HP Windows drivers, HP firmware, HP Windows utilities, and HP management agents that assist in the server deployment process by preparing the server for installation of standard Windows operating system and in the on going management of the server. Please note that this is available for HP service personnel but not provided to end customers.
- **Partition Manager and Partition Commands**

Two tools are available for managing nPartition (hard partition) configurations on Superdome. The first tool is the Partition Manager (parmgr) is a web-based application that allows system administrators to use a convenient graphical user interface (GUI) to configure and manage nPartitions on HP server systems. Partition Manager can also detect several types of configuration problems. Partition Manager can be accessed on the SMS through the System Management Homepage (see below).

The second tool is Partition Commands (parCLI) is a set of command-line utilities for viewing and modifying the nPartition configuration of HP server systems. All functionality provided by the Partition Commands are also available via the Partition Manager GUI, however the commands may be used for scripting common tasks. The Partition Commands may be run on the SMS from a Command Prompt window or batch script.

Key features of both tools include full support for creating, modifying, and deleting hardware partitions. Refer to the HP UX section above for additional features of Partition Manager and the Partition Commands.
- **Insight Manager 7** maximizes system uptime and provides powerful monitoring and control. Insight Manager 7 delivers pre-failure alerting for servers ensuring potential server failures are detected before they result in unplanned system downtime. Insight Manager 7 also provides inventory reporting capabilities that dramatically reduce the time and effort required to track server assets and helps systems administrators make educated decisions about which system may required hardware upgrades or replacement. And Insight Manager 7 is an effective tool for managing your HP desktops and notebooks as well as non HP devices instrumented to SNMP or DMI.
- **System Management Homepage** displays critical management information through a simple, task oriented user interface. All system faults and major subsystem status are now reported within the

Configuration

initial System Management Homepage view. In addition, the new tab-based interface and menu structure provide one click access to server log. The System Management Homepage is accessible either directly through a browser (with the partition's IP address) or through a management application such as Insight Manager 7 or an enterprise management application.

- **HP's Management Processor** enables remote server management over the Web regardless of the system state. In the unlikely event that the operating system is not running, the Management Processor can be accessed to power cycle the server, view event logs and status logs, enable console redirection, and more. The Management Processor is embedded into the server and does not take a PCI slot. And, because secure access to the Management Processor is available through SSL encryption, customers can be confident that its powerful capabilities will be available only to authorized administrators. New features on the management processor include:
 - Support for Web Console that provides secure text mode access to the management processor
 - Reporting of error events from system firmware.
 - Ability to trigger the task of PCI OL* from the management processor.
 - Ability to scan a cell board while the system is running.
 - Implementation of management processor commands for security across partitions so that partitions do not modify system configuration.
- **OpenView Management Tools**, such as OpenView Operations and Network Node Manager, will be able to collect and process information from the SNMP agents and WMI running on Windows Itanium 2 based servers. In the future, OpenView agents will be able to directly collect and correlate event, storage, and performance data from Windows Itanium 2-based servers, thus enhancing the information OpenView management tools will process and present.

Red Hat RHEL AS 3 and SUSE SLES 9

- **Insight Manager 7** maximizes system uptime and provides powerful monitoring and control. Insight Manager 7 also provides inventory reporting capabilities that dramatically reduce the time and effort required to track server assets and helps systems administrators make educated decisions about which system may require hardware upgrades or replacement. And Insight Manager 7 is an effective tool for managing your HP desktops and notebooks as well as non HP devices instrumented to SNMP or DMI.
- **The HP Enablement Kit for Linux** facilitates setup and configuration of the operating system. This kit includes System Imager, an open source operating system deployment tool. System Imager is a golden image based tool and can be used for initial deployment as well as updates.
- **Partition Manager** creates and manages nPartitions-hard partitions for high-end servers. Once the partitions are created, the systems running on those partitions can be managed consistently with all the other tools integrated into Servicecontrol Manager.

NOTE: At first release, Partition Manager will require an HP-UX 11i Version 2 partition or separate device (i.e. Itanium2 based workstation or server running HP-UX 11i Version 2) in order to configure Red Hat or SUSE partitions. Refer to HP UX section above for key features of Partition Manager.
- **HP's Management Processor** enables remote server management over the Web regardless of the system state. In the unlikely event that the operating system is not running, the Management Processor can be accessed to power cycle the server, view event logs and status logs, enable console redirection, and more. The Management Processor is embedded into the server and does not take a PCI slot. And, because secure access to the Management Processor is available through SSL encryption, customers can be confident that its powerful capabilities will be available only to authorized administrators.
 - Support for Web Console that provides secure text mode access to the management processor
 - Reporting of error events from system firmware.
 - Ability to trigger the task of PCI OL* from the management processor.

NOTE: Online addition/replacement (OLAR) is not supported when running Red Hat or SUSE in the partition.

Configuration

- Ability to scan a cell board while the system is running. (only available for partitionable systems)
- Implementation of management processor commands for security across partitions so that partitions do not modify system configuration. (only available for partitionable systems)

General Site Preparation Rules

AC Power Requirements
The modular, N+1 power shelf assembly is called the Front End Power Subsystem (FEPS). The redundancy of the FEPS is achieved with 6 internal Bulk Power Supplies (BPS), any five of which can support the load and performance requirements.

Input Options

Reference the Site Preparation Guide for detailed power configuration options.

Input Power Options

PDCA Product Number	Source Type	Source Voltage (nominal)	PDCA Required	Input Current Per Phase 200-240 VAC	Power Required
A5800A Option 006	3-phase	Voltage range 200-240 VAC, phase-to-phase, 50/60 Hz	4-wire	44 A Maximum per phase	2.5 meter UL power cord and OL approved plug provided. The customer must provide the mating in line connector or purchase quantity one A6440A opt 401 to receive a mating in line connector. An electrician must hardwire the in-line connector to 60 A/63 A site power. ^{a,b,c}
A5800A Option 007	3-phase	Voltage range 200-240 VAC, phase-to-neutral, 50/60 Hz	5-wire	24 A Maximum per phase	2.5 meter <HAR> power cord and VDE approved plug provided. The customer must provide the mating in line connector or purchase quantity 1 A6440A opt 501 to receive a mating in-line connector. An electrician must hardwire the in-line connector to 30 A/32 A site power. ^{a,b,d}

- A dedicated branch is required for each PDCA installed.
- In the U.S.A, site power is 60 Amps; in Europe site power is 63 Amps.
- Refer to the **Option 006 Specifics Table** for detailed specifics related to this option.
- In the U.S.A. site power is 30 Amps; in Europe site power is 32 Amps.

Option 006 and 007 Specifics*

Configuration

PDCA Product Number	Attached Power Cord	Attached Plug	Customer Provided Part	
			In Line Connector	Panel Mount Receptacle
A5800A Option 006	OLFLEX 190 (PN 600804), four-conductor, 6-AWG (16 mm ²), 600-Volt, 60-Amp, 90-degree C, UL, and CSA approved, conforms to CE directives GN/YW ground wire.	Mennekes ME 460P9 3-phase, 4-wire, 60-Amp, 250-Volt, UL-approved. Color blue, IEC 309-1, IEC 309-1, grounded at 3:00 o'clock.	Mennekes ME 460C9 3-phase, 4-wire, 60-amp, 250-Volt, UL-approved. Color blue, IEC 309-1, IEC 309-1, grounded at 9:00 o'clock. ^a	Mennekes ME 460R9 3 phase, 4-wire, 60-amp, 250-Volt, UL-approved. Color blue, IEC 309-1, IEC 309-1, grounded at 9:00 o'clock. ^b
A5800A Option 007	Five conductors, 10-AWG (6 mm ²), 450/475-Volt, 32-Amp, <HAR> European wire cordage, GN/YW ground wire.	Mennekes ME 532P6-14 3-phase, 5-wire, 32-Amp, 450/475-volt, VDE-certified, color red, IEC 309-1, IEC 309-2, grounded at 6:00 o'clock.	Mennekes ME 532C6 16 3-phase, 5-wire, 32-Amp, 450/475-Volt, VDE-certified, color red, IEC 309-1, IEC 309-2, grounded at 6:00 o'clock. ^c	Mennekes ME532R6 1276 3-phase, 5-wire, 32-Amp, 450/475-Volt, VDE-certified, color red, IEC 309-1, IEC 309-2, grounded at 6:00 o'clock. ^b

a. In-line connector is available from HP by purchasing A6440A, Option 401.

b. Panel mount receptacles must be purchased by the customer from a local Mennekes supplier.

c. In-line connector is available from HP by purchasing A6440A, Option 501.

NOTE: A qualified electrician must wire the PDCA in line connector to site power using copper wire and in compliance with all local codes.

Input Requirements

Reference the Site Preparation Guide for detailed power configuration requirements.

Requirements	Value	Conditions/Comments
Nominal Input Voltage (VAC rms)	200/208/220/230/240	
Input Voltage Range (VAC rms)	200-240	Auto-selecting. Measure at input terminals
Frequency Range (Hz)	50/60	
Number of Phases	3	3-phase 5-wire with power cord; 3-phase 4-wire with power cord
Maximum Input Current (A rms), 3-Phase 5-wire	20	3-phase source with a source voltage of 220 VAC measured phase to neutral
Maximum Input Current (A rms), 3-Phase 4-wire	40	3-phase source with a source voltage of either 208 VAC or 230 VAC measured phase to phase
Maximum Inrush Current (A peak)	90	
Circuit Breaker Rating (A), 3-Phase 5-wire	25 A	Per phase
Circuit Breaker Rating (A), 3-Phase 4-wire	45 A	Per phase
Power Factor Correction	0.95 minimum	

Configuration

Ground Leakage Current (mA)	>3.5 mA, with 6 BPSs installed	Warning label applied to the PDCA at the AC Mains input
-----------------------------	--------------------------------	---

Cooling Requirements

- The cooling system in Superdome was designed to maintain reliable operation of the system in the specified environment. In addition, the system is designed to provide redundant cooling (i.e. N+1 fans and blowers) that allows all of the cooling components to be "hot swapped."
- Superdome was designed to operate in all data center environments with any traditional room cooling scheme (i.e. raised floor environments) but in some cases where data centers have previously installed high power density systems, alternative cooling solutions may need to be explored by the customer. HP has teamed with Liebert to develop an innovative data room cooling solution called DataCool. DataCool is a patented overhead climate system utilizing fluid based cooling coils and localized blowers capable of cooling heat loads of several hundred watts per square foot. Some of DataCool's highlights are listed below:
- Liebert has filed for several patents on DataCool
- DataCool, based on Liebert's TeleCool, is an innovative approach to data room cooling
- Liquid cooling heat exchangers provide distributed cooling at the point of use
- Delivers even cooling throughout the data center preventing hot spots
- Capable of high heat removal rates (500 W per square foot)
- Floor space occupied by traditional cooling systems becomes available for revenue generating equipment.
- Enables cooling upgrades when installed in data rooms equipped with raised floor cooling

DataCool is a custom-engineered overhead solution for both new data center construction and for data room upgrades for high heat loads. It is based on Liebert's TeleCool product, which has been installed in 600 telecommunications equipment rooms throughout the world. The system utilizes heat exchanger pump units to distribute fluid in a closed system through patented cooling coils throughout the data center. The overhead cooling coils are highly efficient heat exchangers with blowers that direct the cooling where it is needed. The blowers are adjustable to allow flexibility for changing equipment placement or room configurations. Equipment is protected from possible leaks in the cooling coils by the patented monitoring system and purge function that detects any leak and safely purges all fluid from the affected coils. DataCool has interleaved cooling coils to enable the system to withstand a single point of failure and maintain cooling capability.

Features and Benefits

- Fully distributed cooling with localized distribution
- Even cooling over long distances
- High heat load cooling capacity (up to 500 W per square foot)
- Meets demand for narrow operating temperature for computing systems
- Allows computer equipment upgrade for existing floor cooled data rooms
- Floor space savings from removal of centralized air distribution
- Withstand single point of failures

For More Information

http://www.liebert.com/assets/products/english/products/env/datacool/60hz/bro_8pg/acrobat/sl_16700.pdf

Configuration

HP has entered into an agreement with Liebert to reference sell the DataCool solution

- The HP/Liebert business relationship is managed by the HP Complementary Products Division.
- DataCool will be reference by HP. Liebert will perform installation, service and support.
- HP will compensate the HP Sales Representative and District Manager for each DataCool that Liebert sells to a customer referred by HP.
- An HP/Liebert DataCool website will be setup to get more information on the product and to manage the reference sales process. Please go to <http://hpcp.grenoble.hp.com/> for more information.

Environmental

- 68 to 86 degrees F (20 to 30 degrees C) inlet ambient temperature
- 0 to 10,000 feet (0 to 3048 meters)
- 2600 CFM with N+1 blowers. 2250 CFM with N.
- 65 dBA noise level

Uninterruptible Power Supplies (UPS)

HP will be reselling-high end (10 kW and above) three-phase UPS systems from our partners. We will test and qualify a three-phase UPS for Superdome.

- All third-party UPS resold by HP are tested and qualified by HP to ensure interoperability with our systems
- We plan to include ups_mon and ups communications capability in the third party UPS(s), thus ensuring consistent communications strategy with our PowerTrust UPS(s)
- We will also establish a support strategy with our third-party UPS partners to ensure the appropriate level of support our customer have come to expect from HP.
- For more information on the product and to manage the reference sales process please go to <http://hpcp.grenoble.hp.com/>.

APC Uninterruptible Power Supplies for Superdome

The Superdome team has qualified the APC Silcon 3-phase 20 kW UPS for Superdome.

There are several configurations that can be utilized depending on the Superdome configuration your customer is deploying. They range from a 64-socket Superdome with dual cord and dual UPS with main tie main to a 32-socket Superdome with single cord and single UPS. In all configurations the APC Silcon SL20KFB2 has been tested and qualified by the Superdome engineers to ensure interoperability.

HP UPS Solutions

Configuration

Product Number/ Description	Quantity/ Configuration	Watt	VA	Technology	Family	Package	Output
SL20KFB2 APC Silcon 3-phase UPS	<ul style="list-style-type: none"> Quantity 2/ 32- or 64-socket dual-cord/dual- UPS with main- tie-main Quantity 1/ 32- or 64-socket single- cord/single-UPS 	20 kW	20 kVA	Delta conversion on-line double conversion	APC Silcon 3-phase	Standalone rack	Configurable for 200: 208 or 220V 3- phase nominal output voltage
QJB22830 Switch Gear	<ul style="list-style-type: none"> Quantity 1/ 32- or 64-socket dual-cord/dual- UPS with main- tie-main Quantity 0/ 32- or 64-socket single- cord/single-UPS 	N/A	N/A	N/A	Customer Design for Superdome	N/A	N/A
WSTRUP5X8- SL10 Start-Up Service	<ul style="list-style-type: none"> Quantity 2/ 32- or 64-socket dual-cord/dual- UPS with main- tie-main Quantity 1/ 32- or 64-socket single- cord/single-UPS 	N/A	N/A	N/A	N/A	N/A	N/A
WONSITENBD- SL10 Next Business Day On-site Service	<ul style="list-style-type: none"> Quantity 2/ 32- or 64-socket dual-cord/dual- UPS with main- tie-main Quantity 1/ 32- or 64-socket single- cord/single-UPS 	N/A	N/A	N/A	N/A	N/A	N/A

NOTE: The APC Silcon 3-phase UPS solutions for Superdome must be ordered directly from APC. Please contact Ron Seredian at rseredia@apcc.com.

Superdome Server Watt Ratings for UPS loading

Class	Models	Watt Rating for UPS loading	UPSs Typically Used
Superdome	32-socket	19 kW	SL20KFB2; 20 kW/20 kVA
Superdome	64-socket	19 kW each cabinet; 38 kW total	SL20KFB2; 20 kW/20 kVA; Quantity 2

Configuration

Power Protection

Runtimes

The UPS will provide battery backup to allow for a graceful shutdown in the event of a power failure. Typical runtime on the APC SL20KFB2 Silcon 3 Phase UPS varies with the kW rating and the load. The APC SL20KFB2 UPS provides a typical runtime of 36.7 minutes at half load and 10.7 at full load. If additional run time is needed please contact your APC representative

Power Conditioning

The APC SL20KFB2 provides unparalleled power conditioning with its Delta-Conversion on-line double conversion technology. This is especially helpful in regions where power is unstable.

Continuous Power during Short Interruptions of Input Power

The APC SL20KFB2 will provide battery backup to allow for continuous power to the connected equipment in the event of a brief interruption in the input power to the UPS. Transaction activity will continue during brief power outage periods as long as qualified UPS units are used to provide backup power to the SPU, the Expansion Modules, and all disk and disk array products.

UPS Configuration Guidelines

In general, the sum of the "Watt rating for UPS sizing" for all of the connected equipment should not exceed the watt rating of the UPS from which they all draw power. In previous configuration guides, this variable was called the "VA rating for UPS sizing." With Unity Power Factor, the Watt rating was the same as the kVA rating, so it didn't matter which one we used. VA is calculated by multiplying the voltage times the current. Watts, which is a measurement of true power, may be less than VA if the current and voltage are not in phase. APC SL20KFB2 has Unity Power Factor correction, so the kW rating equals the kVA rating. Be sure to add in the needs for the other peripherals and connected equipment. When sizing the UPS, allow for future growth as well. If the configuration guide or data sheet of the equipment you want to protect gives a VA rating, use this as the watt rating. If the UPS does not provide enough power for the additional devices such as system console and mass storage devices, additional UPSs may be required.

Superdome

The only qualified UPS available for use with Superdome is the APC SL20KFB2 Silcon 3 Phase 20-kW UPS.

The APC SL20KFB2 can provide power protection for the SPU and peripherals. If the system console and primary mass storage devices also require power protection (which is highly recommended) they may require one or more additional UPSs depending on the total Watts. Make sure that the total watts do not exceed the UPS's voltage rating.

Integration/Installation

The APC SL20KFB2 includes both field integration start up service and next day on-site service for one year provided by APC.

Power Connections with the APC SL20KFB2

Product Number	Watts	NOM Out	Output Receptacles	Input Receptacles
SL20KFB2	20 kW	115/200 3PH, 120/208 3PH, 127/220 3PHV	Hardwire	Hardwire

Communications Connections

A DB-25 RS-232 Contact Closure connection is standard on all APC SL20KFB2 UPS. A WEB/SNMP card is also included.

Power Management

Configuration

Description	Network interface cards that provide standards-based remote management of UPSs
General Features	Boot-P support, Built-in Web/SNMP management, Event logging, Flash Upgradeable, MD5 Authentication Security, Password Security, SNMP Management, Telnet Management, Web Management
Includes	CD with software, User Manual
Documentation	User Manual Installation Guide

Type of UPSs

Some customers may experience chronic "brown-out" situations or have power sources that are consistently at the lower spectrum of the standard voltage range. For example, the AC power may come in consistently at 92 VAC in a 110 VAC area. Heavy-load electrical equipment or power rationing are some of the reasons these situations arise. The APC SL20KFB2 units are designed to kick in before the AC power drops below the operating range of the HP Superdome Enterprise Server. Therefore, these UPS units may run on battery frequently if the AC power source consistently dips below the threshold voltage. This may result in frequent system shutdowns and will eventually wear out the battery. Although the on-line units can compensate for the AC power shortfall, the battery life may be shortened. The best solution is to use a good quality boost transformer to "correct" the power source before it enters the UPS unit.

Ordering Guidelines

- The APC SL20KFB2 Silcon 3-phase UPS units may be ordered as part of a new Superdome system order or as a field upgrade to an existing system.
- For new systems order please contact Ron Seredian at APC by e-mail at rseredia@apcc.com during the Superdome pre-consulting phase. APC will coordinate with HP to ensure the UPS is installed to meet the Superdome installation schedule.
- For field upgrades please contact Ron Seredian at APC by e-mail at rseredia@apcc.com when you determine a customer is in need and/or interested in power protection for Superdome. APC will coordinate with the customer to ensure the UPS is installed to meet their requirements.
- Numerous options can be ordered to compliment APC SL20KFB2 Silcon 3-phase UPS units. Your APC consultant can review these option with you are you can visit the APC website at www.apcc.com

Power Redundancy

Superdome servers, by default, provide an additional power supply for N+1 protection. As a result, Superdome servers will continue to operate in the event of a single power supply failure. The failed power supply can be replaced without taking the system down.

Multi-cabinet Configurations

When configuring Superdome systems that consist of more then one cabinet and include I/O expansion cabinets, certain guidelines must be followed, specifically the I/O interface cabling between the Superdome cabinet and the I/O expansion cabinet can only cross one additional cabinet due to cable length restrictions.

Configuration Guidelines/Rules

Superdome Configuration Guidelines/Rules

Configuration

Category	Rule Index	Rule Description
General	1	Every Superdome complex requires connectivity to a Support Management Station (SMS). The PC-based SMS also serves as the system console.
	2	Every cell in a Superdome complex must be assigned to a valid physical location.
CPU	3	All CPUs in a cell are the same type, same Front Side Bus (FSB) frequency, and same core frequency.
Memory	4	Configurations with 8, 16 and 32 DIMM slots are recommended (i.e. are fully qualified and offer the best bandwidth performance.)
	5	Configurations with 4 and 24 DIMM slots are supported (i.e. are fully qualified, but don't necessarily offer the best bandwidth performance).
	6	DIMMs can be deallocated in 2 DIMM increments (to support HA).
	7	Mixed DIMM sizes within a cell board are supported, but only in separate Mbat interleaving groups.
	8	System orders from the factory provide mixed DIMM sizes in recommended configurations only.
	9	For system orders from the factory, the same memory configuration must be used for all cells within a partition.
	10	DIMMs in the same rank must have SDRAMs with the same number of banks and row and column bits.
	11	Size of memory within an interleave group must be power of 2.
	12	DIMMs within the same interleave group must be same size and have same number of banks, row bits, and column bits.
	13	There are currently no restrictions on mixing DIMMs (of the same type) with different vendor SDRAMs.
I/O	14	One cell in every partition must be connected to an I/O chassis that contains a Core I/O card, a card connected to boot media, a card connected to removable media, and a network card with a connected network.
	15	A partition cannot have more I/O chassis than it has active cells.
	16	Removable media device controller should be in slot 8 of the I/O chassis.
	17	Core I/O card must be in slot 0 of the I/O chassis.
	18	Boot device controller should be in slot 1 of the I/O chassis
	19	PCI-X high bandwidth I/O cards should be in the high bandwidth slots in the I/O chassis
	20	Every I/O card in an I/O chassis must be assigned to a valid physical location.
	21	Every I/O chassis in a Superdome complex must be assigned to a valid physical location
Performance	22	The amount of memory on a cell should be evenly divisible by 4 GB if using 512-MB DIMMs or 8 GB if using 1-GB DIMMs, i.e. 8, 16 or 32 DIMMs. The cell has four memory subsystems and each subsystem should have an echelon (2 DIMMs) populated. The loading order of the DIMMs alternates among the four subsystems. This rule provides maximum memory bandwidth on the cell, by equally populating all four memory subsystems.
	23	All cells in a partition should have the same number of processors.
	24	The number of active CPUs per cell should be balanced across the partition, however minor differences are OK. (Example: 4 active CPUs on one cell and three active CPUs on the second cell)
	25	If memory is going to be configured as fully interleaved, all cells in a partition should have the same amount of memory (symmetric memory loading). Asymmetrically distributed memory affects the interleaving of cache lines across the cells. Asymmetrically distributed memory can create memory regions that are non optimally interleaved. Applications whose memory pages land in memory interleaved across just one cell can see up to 16 times less bandwidth than ones whose pages are interleaved across all cells.

Configuration

26	If a partition contains 4 or fewer cells, all the cells should be linked to the same crossbar (quad) in order to eliminate bottlenecks and the sharing of crossbar bandwidth with other partitions. In each Superdome cabinet, slots 0, 1, 2 and 3 link to the same crossbar and slots 4, 5, 6 and 7 link to the same crossbar.
27	A Core I/O card should not be selected as the main network interface to a partition. A Core I/O card is a PCI X 1X card that possibly produces lower performance than a comparable PCI X 2X card.
28	The number of cells in a partition should be a power of two, i.e., 2, 4, 8, or 16. Optimal interleaving of memory across cells requires that the number of cells be a power of two. Building a partition that does not meet this requirement can create memory regions that are non optimally interleaved. Applications whose memory pages land in the memory that is interleaved across just one cell can experience up to 16 times less bandwidth than pages which are interleaved across all 16 cells.
29	<p>Before consolidating partitions in a Superdome 32-socket or 64-socket system, the following link load calculation should be performed for each link between crossbars in the proposed partition.</p> <p>Links loads less then 1 are best. As the link load begins to approach 2 performance bottlenecks may occur.</p> <p>For crossbars X and Y Link Load = $Q_x * Q_y / Q_t / L$, where</p> <ul style="list-style-type: none"> - Q_x is the number of cells connected to crossbar X (quad) - Q_y is the number of cells connected to crossbar Y (quad) - Q_t is the total number of cells in the partition - L is the number of links between crossbar X and Y (2 for Superdome 32-socket systems and 1 for Superdome 64-socket systems)
30	Maximum performance for optimal configurations (power of two cells, uniform memory across cells, power of two DIMM ranks per cell)
31	(If rule #30 cannot be met, rule #31 is recommended) Non-power of two cells, but still uniform memory across cells, power of two DIMM ranks per cell, uniform type of DIMM.
32	(If rule #30 or #31 cannot be met, rule #32 is recommended) Same amount of memory in each cell, but possibly different memory types in each cell (for instance, a two cell configuration with 8 512MB DIMMs in one cell, and 4 1GB DIMMs in the other). Differences in memory across different cells within the same partition should be minimal for the best performance.
33	Same amount of memory in each cell, but non optimal and/or mixed loading within a cell (for instance, a two cell configuration with 16 512MB DIMMs and 8 1GB DIMMs in each cell).
34	Non-uniform amount of memory across cells (this needs to boot and run, but performance is whatever you get).
35	For the same amount of total memory, best performance is with a larger number of smaller size DIMMs.

Configuration

Single System High Availability	36	Each cell should have at least two active CPUs.
	37	Each cell should have at least 4 GB (8 DIMMs) of memory using 512-MB DIMMs and at least 8 GB of memory using 1-GB DIMMs.
	38	I/O chassis ownership must be localized as much as possible. One way is to assign I/O chassis to partitions in sequential order starting from INSIDE the single cabinet, then out to the I/O expansion cabinet 'owned' by the single cabinet.
	39	I/O expansion cabinets can be used only when the main system cabinet holds maximum number of I/O card cages. Thus, the cabinet must first be filled with I/O card cages before using an I/O expansion cabinet.
	40	Single cabinets connected to form a dual cabinet (using flex cables) should use a single I/O expansion cabinet if possible.
	41	Spread enough connections across as many I/O chassis as it takes to become 'redundant' in I/O chassis'. In other words, if an I/O chassis fails, the remaining chassis have enough connections to keep the system up and running, or in the worst case, have the ability to reboot with the connections to peripherals and networking intact.
	42	All SCSI cards are configured in the factory as unterminated. Any auto termination is defeated. If auto termination is not defeatable by hardware, the card is not used at first release. Terminated cable would be used for connection to the first external device. In the factory and for shipment, no cables are connected to the SCSI cards. In place of the terminated cable, a terminator is placed on the cable port to provide termination until the cable is attached. This is needed to allow HP-UX to boot. The customer does not need to order the terminators for these factory integrated SCSI cards, since the customer will probably discard them. The terminators are provided in the factory by use of constraint net logic.
	43	Partitions whose I/O chassis are contained within a single cabinet have higher availability than those partitions that have their I/O chassis spread across cabinets.
	44	A partition's core I/O chassis should go in a system cabinet, not an I/O expansion cabinet
	45	A partition should be connected to at least two I/O chassis containing Core I/O cards. This implies that all partitions should be at least 2 cells in size. The lowest number cell or I/O chassis is the 'root' cell; the second lowest number cell or I/O chassis combo in the partition is the 'backup root' cell.
	46	A partition should consist of at least two cells.
	47	Not more than one partition should span a cabinet or a crossbar link. When crossbar links are shared, the partition is more at risk relative to a crossbar failure that may bring down all the cells connected to it.
Multi-System High Availability (Please also refer to Multi-System High Availability section following this table)	48	Multi-initiator support is required for Serviceguard.

Configuration

Traditional Multi-System High Availability	49	To configure a cluster with no SPOF, the membership must extend beyond a single cabinet. The cluster must be configured such that the failure of a single cabinet does not result in the failure of a majority of the nodes in the cluster. The cluster lock device must be powered independently of the cabinets containing the cluster nodes. Alternative cluster lock solution is the Quorum Service, which resides outside the Serviceguard cluster providing arbitration services.
	50	A cluster lock is required if the cluster is wholly contained within two single cabinets (i.e., two Superdome/16-socket or 32-socket systems or two Superdome/PA-8800/PA-8900 32-socket or 64-socket systems) or two dual cabinets (i.e. two Superdome/64-socket systems or two Superdome/PA-8800/PA-8900 128-socket systems). This requirement is due to a possible 50% cluster failure.
	51	Serviceguard only supports cluster lock up to four nodes. Thus a two cabinet configuration is limited to four nodes (i.e., two nodes in one dual cabinet Superdome/64-socket system or Superdome/PA-8800/PA-8900 128-socket system and two nodes in another dual cabinet Superdome/64-socket system or Superdome/PA-8800/PA-8900 128-socket system). The Quorum Service can support up to 50 clusters or 100 nodes (can be arbitrator to both HP-UX and Linux clusters).
	52	Two-cabinet configurations must evenly divide nodes between the cabinets (i.e. 3 and 1 is not a legal 4-node configuration).
	53	Cluster lock must be powered independently of either cabinet.
	54	Root volume mirrors must be on separate power circuits.
	55	Redundant heartbeat paths are required and can be accomplished by using either multiple heartbeat subnets or via standby interface cards.
	56	Redundant heartbeat paths should be configured in separate I/O chassis when possible.
	57	Redundant paths to storage devices used by the cluster are required and can be accomplished using either disk mirroring or via LVM's pvlins.
	58	Redundant storage device paths should be configured in separate I/O chassis when possible.
	59	Dual power connected to independent power circuits is recommended.
Heterogeneous Multi System High Availability	60	Cluster configurations can contain a mixture of Superdome and non Superdome nodes.
	61	Care must be taken to configure an even or greater number of nodes outside of the Superdome cabinet
	62	If half the nodes of the cluster are within a Superdome cabinet, a cluster lock is required (4-node maximum cluster size)
	63	If more than half the nodes of a cluster are outside the Superdome cabinet, no cluster lock is required (16-node maximum Serviceguard cluster size).
	64	Up to a 4-node cluster is supported within a single cabinet system (Superdome/16-socket or Superdome/PA-8800/PA-8900 32-socket)
	65	Up to an 8-node cluster is supported within a single cabinet system* (Superdome/32-socket or Superdome/PA-8800/PA-8900 64-socket)
	66	Up to a 16-node cluster is supported within a dual cabinet system* (Superdome/64-socket or Superdome/PA-8800/PA-8900 128-socket)
	67	Cluster lock is required for 2-node configurations
	68	Cluster lock must be powered independently of the cabinet.
	69	Root volume mirrors must be on separate power circuits.
	70	Dual power connected to independent power circuits is highly recommended.

Configuration

* Superdome 32-socket system requires an I/O expansion cabinet for greater than 4 nodes. Superdome 64-socket system requires an I/O expansion cabinet for greater than 8 nodes.

NOTE:

"Recommended" refers to configurations that are fully qualified and offer the best bandwidth performance.
"Supported" refers to configurations that are fully qualified, but do not necessarily offer the best performance.

Instant Capacity

CPU Instant Capacity

Superdome servers can be populated with Itanium 2 CPUs or mx2 CPUs. Cell boards will be available from HP in either half or fully populated versions. A half populated cell board has CPUs or dual processor modules in two of the four available sockets. A fully populated cell board has all four sockets filled.

It is no longer necessary to pay for the additional CPUs until the customer uses them. However with HP's Instant Capacity the remaining CPUs that would cause the cell board to become fully populated can be installed and remain idle. The additional CPUs can be activated instantly with a simple command providing immediate increases in processing power to accommodate application traffic demands.

In the unlikely event that a CPU fails, the HP system will replace the failed CPU on the cell board at no additional charge. The Instant Capacity CPU brings the system back to full performance and capacity levels, reducing downtime and ensuring no degradation in performance.

When additional capacity is required, additional CPUs on a cell board can be brought online. The Instant Capacity CPUs are activated with a single command.

CPU Instant Capacity on Demand can be ordered pre installed on Superdome servers. All cell boards within the Superdome server will be populated with two or four CPUs and the customer orders the number of CPUs that must be activated prior to shipment.

Description	Product Number
Itanium 2 1.5 GHz processor module, contains two CPUs	A6924A
Instant Capacity right to access Itanium 2 1.5 GHz processor module (contains 2 CPUs)	A6925A
Instant Capacity Enable right-to-use Itanium 2 1.5-GHz processor (1 CPU)	A6955A option 02A
Itanium 2 1.6 GHz processor module (contains 2 CPUs)	AD003A
Instant Capacity right to access Itanium 2 1.6 GHz processor module	AD004A
Instant Capacity Enable right-to-use Itanium 2 1.6-GHz processor (1 CPU)	AD005A option 02A
Itanium 2 mx2 processor assembly (contains 4 CPUs and occupies 2 sockets)	A6868A
Itanium 2 mx2 processor assembly (contains 2 CPUs and occupies 1 socket) Note: Requires terminator AB480A if only a single socket is occupied.	AB522A
Instant Capacity right to access mx2 processor assembly (contains 4 CPUs and occupies 2 sockets) Note: Requires terminator AB480A if only a single socket is occupied.	A6887A
Instant Capacity right to access mx2 processor assembly (contains 2 CPUs and occupies 1 socket) Instant Capacity Enable right-to-use mx2 processor (1 CPU)	AB523A

Configuration

Please note that when ordering active sx1000 cell boards, Temporal Instant Capacity and non-Temporal Instant Capacity processors and non-Instant Capacity memory can be ordered. But when ordering Temporal Instant Capacity sx1000 cell boards, only Instant Capacity processors and Instant Capacity memory can be ordered.

The following applies to CPU Instant Capacity on Superdome servers:

- The number of Instant Capacity processors is selected per partition instead of per system at planning/order time.
- At least one processor per cell in a partition must be a purchased processor.
- Processors are deallocated by Instant Capacity in such a way as to distribute deallocated processors evenly across the cells in a partition. There is no way for a Customer Engineer (CE) or an Account Support Engineer (ASE) or a customer to influence this distribution.
- Reporting for the complex is done on a per partition basis. In other words, all partitions with Instant Capacity processors must be capable of and configured for sending e mail to HP.
- Processors can be allocated and deallocated instantly or after a reboot at the discretion of the user.
- A license key must be obtained prior to either activating or deactivating Instant Capacity processors. A free license key is issued once email connectivity with HP has been successfully established from all partitions with Instant Capacity processors.

Performance Considerations with CPU Instant Capacity:

- Going from one to two to three active CPUs on a cell board gives linear performance improvement
- Going from three to four active CPUs gives linear performance improvement for most applications except some technical applications that push the memory bus bandwidth.
- Number of active CPUs per cell boards should be balanced across partitions. However, minor differences are okay (example: four active CPUs on one cell board and three active CPUs on the second cell board).
- Note that the Instant Capacity software will do CPU activation to minimize differences of number of active CPUs per cell board within a partition.

Cell Board ICAP

With cell board ICAP, Superdome servers can be populated with Itanium 2 cell boards (CPU and memory) and it is no longer necessary to pay for the additional cell boards (CPU and memory) until the customer uses them. Additional CPUs and cell boards can be activated instantly with a simple command providing immediate increases in processing power and memory capacity to accommodate application traffic demands.

In the unlikely event that a cell board fails, the HP system will replace the cell board at no additional charge. The ICAP cell board brings the system back to full performance and capacity levels, reducing downtime and ensuring no degradation in performance.

Please note the following when ordering Instant Capacity sx1000 cell boards:

- only Instant Capacity processors and Instant Capacity memory can be ordered.
- the maximum memory needed must be ordered because it is not possible to purchase additional Instant Capacity memory without ordering the Instant Capacity Cell Board upgrade product, A9913A.

When additional capacity is required, additional cell boards can be brought online. The ICAP cell boards are each activated with a single command.

Cell board Capacity on Demand (ICAP) can be ordered pre installed on Superdome servers. All cell boards within the Superdome server will be populated with two or four CPUs and the customer orders the number of CPUs that must be activated prior to shipment.

Configuration

Below are the relevant product numbers of cell board Instant Capacity:

Description	Product Number
Instant Capacity cell board (no cpu/memory included)	
factory integration	A9743A
field add-on	A9913A
Instant Capacity cell board enablement	A9747A option 02A
Instant Capacity 2 GB memory (Integrity SD)	A9744A
Instant Capacity 2 GB memory enablement	A9748A option 02A
Instant Capacity 4 GB memory (Integrity SD)	A9745A
Instant Capacity 4 GB memory enablement	A9749A option 02A
Instant Capacity 8 GB memory (Integrity SD)	A9746A
Instant Capacity 8 GB memory enablement	A9750A option 02A

Temporay Instant Capacity

Temporary Capacity for Instant Capacity provides the customer the flexibility to temporarily activate an Instant Capacity processor(s) for a 30-CPU day period. The program includes a temporary Operating Environment (OE) license to use and temporary hardware/software support. The Instant Capacity temporary capacity program enables customers to tap into processing potential for a fraction of the cost of a full activation, to better match expenditures with actual usage requirements and to enjoy the benefits of a true utility model in a capitalized version.

To order Instant Capacity temporary capacity on Superdome, A7067A must be ordered. For more information on Instant Capacity, please refer to the appropriate section in this guide.

Windows Server 2003

Superdome partitions running Windows Server 2003 Datacenter edition (64-bit) do not support CPU Instant Capacity, cell board Instant Capacity and Instant Capacity temporary capacity at this time.

Red Hat RHEL AS 3 and SUSE SLES 9

Superdome partitions running Red Hat or SUSE do not support CPU Instant Capacity, cell board Instant Capacity and Instant Capacity temporary capacity.

Utility or Pay-per-Use Program

HP Utility Pricing allows financial decisions on investments to be postponed until sufficient information is available. It allows customers to align their costs with revenues, thereby allowing customers to transition from fixed to variable cost structures. This more flexible approach allows customers to size their compute capacity consistent with incoming revenues and Service Level Objectives. HP Utility Pricing encompasses just-in- time purchased capacity, pay-per-forecast based on planned usage, as well as pay-per-use via metered usage. All offerings are industry leading performance solutions to our customers.

Customers are able to pay for what they use with this new processing paradigm. The usage payments are comprised of both fixed and variable amounts, with the latter based on average monthly CPU usage. Additionally, with HP retaining ownership of the server, technology obsolescence and underutilized processing assets are no longer a customer concern. This is the cornerstone of HP's pay-as-you-go Utility Pricing. Customers will be able to benefit from their servers as a "compute utility". Customers will choose when to apply additional CPU capacity and will only be charged when the additional processing power is utilized. Real-life examples of processing profiles that benefit from Pay per Use are season spikes and month-end financial closings.

The utility program is **mutually exclusive** with Instant Capacity. In order to take part in this program, the utility metering agent (T1322AA) must be ordered.

Configuration

Windows

Pay per Use is now available for HP Integrity Superdome systems running Microsoft Windows Server 2003 Datacenter edition (64 bit) under the Percent CPU model. However, at the present time there is no Active CPU offering and there is no iLAP offering for Windows on Integrity. The Windows PPU LTU product number is T2765AA and option -001 must be ordered for each CPU.

Linux

Superdome systems running Linux do not support utility or pay-per-use program.

Upgrades

For information on Superdome System Upgrades, please refer to the Superdome Server Upgrades QuickSpec.

Memory

Total Amount Memory per Cell	No. of 512 MB	No. of 1 GB	E0 0A-0B	E1 1A-1B	E2 2A-2B	E3 3A-3B	E4 4A-4B	E5 5A-5B	E6 6A-6B	E7 7A-7B	E8 8A-8B	E9 9A-9B	EA AA-AB	EB BA-BB	EC CA-CB	ED DA-DB	EE EA-EB	EF FA-FB
4 GB	8		512 MB	512 MB	512 MB	512 MB												
8 GB		8	1 GB	1 GB	1 GB	1 GB												
8 GB	16		512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB								
16 GB		16	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB								
16 GB	32		512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB
32 GB		32	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB
12 GB	8	8	1 GB	1 GB	1 GB	1 GB	512 MB	512 MB	512 MB	512 MB								
24 GB	16	16	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB
28 GB	8	24	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	512 MB	512 MB	512 MB	512 MB
2 GB	4		512 MB	512 MB														
4 GB		4	1 GB	1 GB														
12 GB	24		512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB				
24 GB		24	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB				
20 GB	8	16	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	512 MB	512 MB	512 MB	512 MB				

Ex Echelon number, i.e. Echelon 0 consists of 2 DIMMs, 1 on A side and 1 on B side.

0A 0B refers to two DIMMs in Echelon 0, A and B side.

Recommended List of DIMM Configurations in Superdome

Total Amount of Memory Per Cell (GB)	Number of 512 MB DIMMs	Number of 1 GB DIMMs
2	4	0
4	8	0
4	0	4
8	0	8
8	16	0
12	8	8
12	24	0
20	8	16
16	0	16
16	32	0
24	16	16
24	0	24
28	8	24
32	0	32

Memory

NOTES:

1. Configurations with 8, 16, or 32 DIMMs will result in the best performance
2. These are configurations that are shipped from manufacturing. Other configurations are supported, as long as they are not illegal.

Technical Specifications

Superdome Specifications	SPU Description	Superdome 16-socket*	Superdome 32-socket*	Superdome 64-socket*
	SPU Product Number	A6113A	A5201A	A5201A+A5202A
	Number of Itanium 2 1.5 GHz or 1.6 GHz processors	2 - 16	2 - 32	6 - 64
	Number of mx2 processors	2 - 32	2 - 64	6 - 128 (Windows supports up to 64 processors in a single partition; a single Windows Server 2003 partition can support up to 64 way SMP, a fully configured mx2 64 socket Superdome requires at least 2 Windows operating system partitions)
	Benchmarks			
	TPC-C disclosure (HP-UX)	N/A	N/A	TBD
	TPC-C disclosure (Windows)	N/A	N/A	786,646 tpmC (Windows Server 2003 Datacenter Edition with SQL Server 2000 (64-bit version))
	Supported Processors			
	Itanium 2 Processor	1.5 GHz, 6 MB cache	1.5 GHz, 6 MB cache	1.5 GHz, 6 MB cache
	Itanium 2 Processor	1.6 GHz, 9 MB cache	1.6 GHz, 9 MB cache	1.6 GHz, 9 MB cache
	Mx2 Processor Module (2 CPUs)	1.1 GHz, 6 MB cache (each CPU)	1.1 GHz, 6 MB cache (each CPU)	1.1 GHz, 6 MB cache (each CPU)
	Memory			
	512 MB DIMMs	2 - 128 GB	2 - 256 GB	6 - 256 GB
	1 GB DIMMs	4 - 128 GB	4 - 256 GB	12 - 512 GB
	2 GB DIMMs	8 - 256 GB	8 - 512 GB	24 - 1024 GB
	DIMM Density (MB)	512 / 1024	512 / 1024	512 / 1024
	Cell Boards			
	1-socket (mx2 only), 2 socket, 3-socket (mx2 only) or 4 socket cells	1 - 4	1 - 8	3 - 16
	Software Support			
	HP-UX revision	HP-UX 11i version 2		
	Windows revision	Windows Server 2003, Datacenter Edition for Itanium 2.		

Technical Specifications

Linux revision

Red Hat RHEL AS 3 Update 3 / SUSE SLES 9

Linux revision on Superdome with Intel Itanium 2 processors only (not on Superdome with mx2 processor modules)

Expandability / Connectivity

12 slot PCI X I/O chassis

1 - 4

1 - 8

1 - 16

Note: SPU cabinet must be filled first before placing I/O chassis in I/O expansion cabinet

No I/O expansion cabinet needed

I/O expansion cabinet required if number of I/O chassis is more greater than 4.

I/O expansion cabinet required if number of I/O chassis is greater than 8. A second I/O expansion cabinet is required if the number of I/O chassis is greater than 14.

Number of Partitions without I/O expansion cabinet

1 - 4

1 - 4

1 - 8

Number of Partitions with I/O expansion cabinet

Not Applicable

1 - 8

1 - 16

RS 232C Serial Ports

Yes

Yes

Yes

10/100Base T Ethernet

Yes

Yes

Yes

Windows does not support 10/100 Base T Ethernet. Windows requires Gigabit Ethernet card

Windows does not support 10/100 Base T Ethernet. Windows requires Gigabit Ethernet card

Windows does not support 10/100 Base T Ethernet. Windows requires Gigabit Ethernet card

Maximum I/O Cards See supported I/O table for specific products

Mass Storage

16 - 48

16 - 96

16 - 192

LAN

2 - 32

2 - 48

2 - 96

WAN

8

16

32

Multi-Function (Mass Storage / LAN)

8 - 48

16 - 96

32 - 192

Additional Interface Cards

8

8 - 14

8 - 14

Typical Electrical Characteristics by Configuration

AC input power

200 240 VAC, 50/60 Hz

200 240 VAC, 50/60 Hz

200 240 VAC, 50/60 Hz

Typical Input Power (watts)

5,900

9,800

19,600

dissipation Itanium 2 (watts)

4 cells, 32 GB, 4 I/O chassis with 6 PCI each

8 cells, 32 GB, 4 I/O chassis with 6 PCI each

16 cells, 32 GB, 4 I/O chassis with 6 PCI each

Typical power dissipation mx2 (watts)

5,730

9,490

18,980

Typical 3 Phase 4Wire Current requirements at 200V 240V

17A / Phase

29A / Phase

Two Cabinets 29A / Phase

Typical 3 Phase 5Wire Current requirements at 200V 240V

10A / Phase

17A / Phase

Two Cabinets 17A / Phase

Technical Specifications

Maximum Electrical Characteristics

Maximum Input Power (watts)	8,490	12,196	24,392
Cabinet Marked Electrical			
AC input power-Option 7: 3 phase 5 wire input	200 240 VAC phase to neutral, 5 wire, 50/60 Hz		
AC input power-Option 6: 3 phase 4 wire input	200 240 VAC phase to phase, 4 wire, 50/60 Hz		
Maximum Current requirements at 220V 240V:			
Option 7: 3 phase 5 wire input	24 A/Phase	24 A/Phase	24 A/Phase
Option 6: 3 phase 4 wire input	44 A/Phase	44 A/Phase	44 A/Phase
Required Power Receptacle-	Option 6: IEC Compliant 4 Wire 60A 250V Ph-Ph Option 5: IEC Compliant 5 Wire 32A 480VPh-Ph		

Heat Characteristics

Maximum Heat dissipation (BTUs/hour)	28,969	41,614	83,288
Typical Heat dissipation (BTUs/hour)	20,131	33,439	66,877

Site Preparation

Site planning and installation included	Yes	Yes	Yes
Depth (mm / inches)	1,220 / 48.1	1,220 / 48.1	1,220 / 48.1
Width (mm / inches)	762 / 30	762 / 30	1,524 / 60
Height (mm / inches)	1,960 / 77.2	1,960 / 77.2	1,960 / 77.2
Weight (Kg / lbs)	500 / 1,123	598 / 1,343	1,196 / 2,685

Environmental Characteristics

Acoustics	65 dB
Operating temperature	+20° to +30° C
Non operating temperature	-40° to +70° C
Maximum rate of temperature change	20° C/hour
Operating relative humidity	15% to 80% @ 30°C
Operating altitude	0 3.1 km (0 10,000 ft)
Non operating altitude	0 4.6 km (0 15,000 ft)

Regulatory Compliance

Safety	IEC 950:1991+A1, +A2, +A3, +A4; EN60950:1992+A1, +A2, +A3, +A4, +A11; UL 1950, 3rd edition; cUL CSA C22.2 No. 950 95
--------	--

Technical Specifications

Key Dates

First CPL date

6/03

First ship date

3Q03

Superdome I/O Expansion (IOX) Cabinet Specifications

SPU Description

SPU Product Number

Superdome 16-socket

A6113A

Superdome 32-socket

A5201A

Superdome 64-socket

A5201A + A5202A

Maximum Number of I/O Chassis Enclosures (ICEs)*

Not Applicable

3

3

Peripherals Supported

Not Applicable

All peripherals qualified for use with Superdome and/or for use in a Rack System E are supported in the I/O expansion cabinet as long as there is available space. Peripherals not connected to or associated with the Superdome system to which the I/O expansion cabinet is attached may be installed in the I/O expansion.

Servers Supported

No servers except those required for Superdome system or High Availability Observatory or ISEE may be installed in an I/O expansion cabinet.

Dimensions

Height (mm / inches)

1.6 m (5.2 ft) or 1.96 m (6.4 ft)

Depth (mm / inches)

Not Applicable

45.5 in (115.57 cm) (same depth as 32W)

Width (mm / inches)

24.0 in (61 cm)

Environmental

Not Applicable

Same as Superdome

Relevant Product Numbers

12 slot PCI X Chassis for Rack System E Expansion Cabinet

A6864AZ

A6864AZ

I/O Expansion Cabinet Power and Utilities Subsystem

A5861A

A5861A

I/O Expansion Power and Utilities Subsystem Graphite color

A5861D

A5861D

I/O Chassis Enclosure for 12 slot PCI X Chassis

A5862A

A5862A

NOTE: Each ICE holds two I/O card cages or 24 PCI X I/O slots.

APC SL20KFB2 Specifications

Description

APC Silcon, 20000VA/20000W, Input 115/200 3PH, 120/208 3PH, 127/220 3PHV/ Output 115/200 3PH, 120/208 3PH, 127/220 3PHV, Interface Port DB-25 RS--232, Contact Closure

Technical Specifications

General Features	0% to 95% non-condensing, 200% overload capability, Audible Alarms, Built in static bypass switch, Delta Conversion On line Technology, Environmental Protection, Event logging, Extendable Run Time, Full rated output available in kW, Input Power Factor Correction, Intelligent Battery Management, LCD Alphanumeric Display, Overload Indicator, Paralleling Capability, Sine wave output, SmartSlot, Software, Web Management	
Includes	Parallel Card, Triple Chassis for three SmartSlots, User Manual, Web/SNMP Management Card	
Spare parts kits	See APC website http://www.apcc.com	
Documentation	User Manual and Installation Guide	
Input	Nominal input voltage	115/200 3PH, 120/208 3PH, 127/220 3PH V
	Input frequency	50 Hz programmable +/- 0.5, 1, 2, 4, 6, 8%; 60 Hz programmable +/- 0.5, 1, 2, 4, 6, 8%
	Input connection type	Hardwire 5-wire (3PH + N + G)
	Input voltage range for main operations	170-230 (200 V), 177-239 (208 V), 187-242 (220 V) V
Batteries	Typical backup time at half load	36.7 minutes
	Typical backup time at full load	10.7 minutes
	Battery type	Maintenance-free sealed Lead-Acid battery with suspended electrolyte: leak proof
Physical	Typical recharge time**	2 hours
	Maximum height dimensions	55.12 in (140.00 cm)
	Maximum width dimensions	39.37 in (100.00 cm)
	Maximum depth dimensions	31.50 in (80.01 cm)
	Net weight	1,290.00 lbs (586.36 kg)
	Shipping Weight	1,340.00 lbs (609.09 kg)
	Shipping Height	66.93 in (170.00 cm)
	Shipping Width	43.31 in (110.00 cm)
	Shipping Depth	35.43 in (90.00 cm)
	Color	Dark green (NCS 7020 B50G), Light gray (NCS 2703 G84Y)
Communications and Management	Units per Pallet	1.0
	Interface port	DB-25 RS-232, Contact Closure
	Smart Slot Interface Quantity	2
	Pre-Installed SmartSlot Cards	AP9606
	Control panel	Multi-function LCD status and control console
	Audible alarm	Beep for each 52 alarm conditions
	Emergency Power Off (EPO)	Yes

Technical Specifications

Environmental	Optional Management Device	See APC website http://www.apcc.com
	Operating Environment	32° to 104°F (0° to 40 °C)
	Operating Relative Humidity	0% to 95%
	Operating Elevation	0 to 3333 ft (0 to 999.9 m)
	Storage Temperature	-58° to 104°F (-50° to 40 °C)
	Storage Relative Humidity	0% to 95%
	Storage Elevation	0 to 50,000 ft (0 to 15,000 m)
	Audible noise at 1 meter from surface of unit	55 dBA
	Online thermal dissipation	4,094 BTU/hour
	Protection Class	NEMA 1, NEMA 12
Conformance	Approvals	EN 55022 Class A, ISO 9001, ISO 14001, UL 1778, UL Listed, cUL Listed
	Standard warranty	One-year repair or replace, optional on-site warranties available, optional extended warranties available
	Optional New Service	See APC website http://www.apcc.com

* Without TAX/VAT

** The time to recharge to 90% of full battery capacity following a discharge to shutdown using a load rated for 1/2 the full load rating of the UPS

Superdome Supported I/O

I/O Card	Product Number	Connector Type(s)	Operating Systems ²	Maximum Cards by Sockets per System			Special Notes
				16S	32S	64S	
Mass Storage Host Bus Adapters							
PCI 2x Fibre Channel	A5158A	LC	H	48	96	192	
PCI 2 Gb/s Fibre Channel	A6795A	LC	H	48	96	192	
PCI X 2 channel 2 Gb /sFibre Channel	A6826A	LC	H , L	48	96	192	14 for SLES 9 8 for RHEL 8
PCI 1 channel U160 SCSI	A6828A	VHDCI	H	48	96	192	
PCI 2 channel U160 SCSI	A6829A	VHDCI	H	48	96	192	
PCI Windows and Linux Ultra160 SCSI	A7059A	VHDCI	W , L	16	16	16	8 for Linux
PCI Windows Linux 2 port Ultra160 SCSI	A7060A	VHDCI	W , L	16	16	16	5 for Linux
PCI 2 channel Ultra320 SCSI	A7173A	VHDCI	H, W	48	96	192	16 for Windows Windows - supported with internal tapes & with DS2120 at U160 speeds

Technical Specifications

PCI-X 2 channel Smart Array 6402 U320	A9890A	VHDCI	W , L				2/Windows partition (boot support for Windows) 8/Linux partition
PCI-X 2 channel Smart Array 6404 256 MB	A9891A	VHDCI					
PCI X 2 Gb /sFibre Channel ³	AB232A	LC	W	16	32	32	
PCI X 2 channel 2 Gb /sFibre Channel Windows	AB466A	LC	W	16	16	16	(boot support for Windows)
PCI X 1 channel 2 Gb /sFibre Channel Windows	AB467A	LC	W	32	32	32	(boot support for Windows)
Local Area Network (LAN) Adapters							
PCI 1 port Universal FDDI LAN	A3739B	FDDI SC	H	16	32	64	
PCI 1 port 1000Base SX	A4926A	Duplex SC	H	16	32	64	
PCI 1 port 1000 BaseT	A4929A		H	16	32	64	
PCI 1 port 10/100Base TX	A5230A	RJ-45	H	24	48	96	
PCI 4 port 100Base TX	A5506B	RJ-45	H, L	8	16	32	2 for Linux
PCI 1 port 802.5 Token Ring 4/16/100	A5783A	RJ-45 and DB 9	H	8	16	32	
PCI 1 port 1000Base T (gigabit copper)	A6825A	RJ-45	H	16	32	64	
PCI 1 port 1000Base SX (gigabit fiber)	A6847A	Duplex SC	H	24	48	96	
PCI-X 2-port 1000Base-SX	A7011A	Duplex SC	H	16	32	64	
PCI-X 2-port 1000Base-T	A7012A	RJ-45	H	16	32	64	
PCI 1 port 1000Base-T	A7061A	RJ 45	W, L	32	32	32	8 for Linux
PCI 1 port 1000Base-SX	A7073A	Duplex SC	W, L	32	32	32	8 for Linux
PCI 2 port Windows/Linux 1000Base SX	A9899A	LC	H	16	16	16	
PCI 2 port Windows/Linux 1000Base TX	A9900A	RJ-45	H	16	16	16	
PCI -X 2 port 4x Fabric (HPC) Adapter	AB286A	4x Infiniband Copper	W	8	8	8	
HP PCI-X 133MHz 10GbE SR Fiber Adapter ⁴	AB287A		W	2	2	2	
HP PCI-X 4-port 1000 Base-T Gigabit Adapter	AB545A		H	16	32	64	Stand-alone Shipments
HP PCI-X 2-port 4X Fabric (HA & DB) Adapter	AB345A		H				Stand-alone Shipments
HP 24-port 4X Fabric Copper Switch	376227-B21		H				Replaces AB399A below.
PCI -X 24 port 4x Fabric Copper Switch	AB399A	4x Infiniband Copper	H	8	8	8	Discontinued. Replaced by 376227-B21 above.

Technical Specifications

HP PCI-X 4-port 1000Base-T Gigabit Adpt	AB545A		H	16	32	64	Available June 2005 Boot support
HP PCI-X 2-port 4X Fabric (HA & DB) Adpt	AB345A		H	16	32	64	Available June 2005 No boot support
HP PCI-X 10 GigE	AB287A		H	2	2	2	Available June 2005 No boot support

Multi-Function Cards (Mass Storage / LAN)

PCI 2 port 100Base T/ 2 port Ultra2 SCSI	A5838A	VHDCI/RJ-45	H ¹	8	16	32	
PCI-X 2Gb Fibre Channel / 1000BaseSX	A9782A	LC	H	48	96	192	
PCI-X 2Gb Fibre Channel / 1000BaseTX	A9784A	1 LC, 1 RJ-45	H	48	96	192	
HP PCI-X Multifunction 2-port 2Gb FC / 2-port 1 Gb Ethernet Adapter	AB465A	2 LC	H	16	32	64	3.3 volts only. Supported on HP-UX 11i, HP-UX 11i v2. Factory integration available in April 2005.
HP PCI-X multifunction 2-port 1000BT and dual-port U320 SCSI adapter	AB290A		H	48	96	192	Available June 2005. Boot support on SCSI and GigE
HP PCI-X multifunction 2-port FC and 2-port GigE-T	AB465A		H	48	96	192	Available June 2005. Boot support on FC and GigE

Wide Area Network (WAN) Adapters

PCI 1 port ATM 155 Mbps (MMF)	A5513A	Duplex SC	H	8	16	32	
2 port Programmable Serial Interface (PSI) X.25 / Frame Relay / SDLC	J3525A	RS-530, RS-232, V.35, RS-449 or X.21	H	8	16	32	

Additional Interface Cards

PCI HyperFabric 2 Fibre ¹	A5486A	LC Duplex	H	8	8	8	
PCI 8-port Terminal Multiplexer	A6748A	RS-232	H	8	14	14	
PCI 64-port Terminal Multiplexer	A6749A	RS-232 or RS-422	H	8	14	14	

Technical Specifications

¹No Serviceguard support

²Operating Systems Legend H=HP-UX 11i V2, W= Windows Server 2003 Datacenter, L= Linux (Red Hat RHELAS 3 and SUSE SLES9)

³Supported, but may no longer be orderable

⁴Standalone orders only

NOTE: MSA30 SB/DB are supported as boot disks for Superdome running HP UX 11i with the following cards: A7173A, A6828A, A6829A and A5838A.

Please refer to the table below as guidance for configuring your **Windows Server 2003 partition** on Superdome (note that "Watson" rules are in place that reflect these recommendations). Please note that if the VGA/USB card (A6869A) is used, it would only be needed once per instance to the Windows OS instance.

PCI-X Technical Slotting Information for Windows Server 2003

	Left						Right					
Slot	11	10	9	8	7	6	5	4	3	2	1	0
Clock Speed (MHz)	66	66	66	66	66 or 133	66 or 133	66 or 133	66 or 133	66	66	66	66
Special Notes for Windows Server 2003 Datacenter Edition				SCSI Card (A7060A) removable media slot					Default boot device slot for Smart Array controller (A9890A) recommended	Windows LAN Gig E card (A7061A)		Core I/O slot (A6865A)
Previously on A4856A	2X	2X	2X	2X	4X	4X	4X	4X	2X	2X	2X	2X
Now on PCI-X	4X	4X	4X	4X	8X	8X	8X	8X	4X	4X	4X	4X

NOTE: FC HBA (AB232A, AB466A or AB467A) is to consume 8X slots first and then populate 4X slots (recommended for performance optimization)

The boot configuration for Windows Server 2003, Datacenter Edition Superdome partitions can be the Smart Array 6402 disk array controllers (A9890A) connected to StorageWorks 4400 (a.k.a. MSA30 series enclosures). Other boot devices are the Fibre Channel PCI-X AB4667A or AB467A HBAs. The Windows Server 2003 operating system comes with a software mirroring solution. However, the majority of Windows customers use hardware based RAID solutions instead, such as the industry leading Smart Array disk array controllers from HP, and do not use this mirroring tool. Also note that the Smart Array controllers do not support failover capability (customers cannot have 2 Smart Array cards connected to the same boot partition on a StorageWorks 4300/4400 enclosure). RAID levels 0,1,5,1+0 and ADG are supported as well as disk sparing.

Note that booting from external storage arrays is now supported (HP XP and EVA storage). In these cases, it is recommended by HP that the FC-HBAs are configured in a redundant pair using HP Secure Path software for high availability.

To ensure Windows Server 2003 high availability for storage connectivity, it is recommended to use HP SecurePath (with HP storage) and EMC PowerPath (with EMC storage) for load balancing/redundancy between fibre channel HBAs (AB232A, AB466A or AB467A).

For EMC connectivity with Windows Server 2003 on HP Integrity servers, the EMC support matrix has detailed information concerning supported HP hardware: <http://www.emc.com/interoperability/index.jsp>. Please consult this matrix to determine if your customer's desired configuration is supported by EMC.

Technical Specifications

Superdome Supported Online Storage

Storage Device	HP-UX 11i v2	Windows Server 2003 Datacenter Edition	Red Hat RHEL AS 3 & SUSE SLES 9
XP 48/512	Yes	Yes	Yes
XP128/1024	Yes	Yes	Yes
VA7100	Yes	No	Yes
VA7400	Yes	No	Yes
VA 7410/7110	Yes	Yes	Yes
MSA1000	Yes	Yes	Yes
EVA 5000	Yes	Yes (EVA v3 or greater)	Yes
EVA 3000	Yes	Yes (EVA v3 or greater)	Yes
StorageWorks 4300 series	No	Yes	Yes
StorageWorks 4400 series (MSA30)	Yes	Yes	Yes
FC10	Yes	No	No
SC10	Yes	No	No
DS2100	Yes	Yes	Yes
DS2120	No	Yes	No
DS2110	Yes	No	Yes
DS2300	Yes	No	Yes
DS2405	Yes	No	Yes
EMC Symmetrix 3000	Yes	No	No
EMC Symmetrix 5000	Yes	No	No
EMC Symmetrix 5500	Yes	No	No
EMC Symmetrix 8000	Yes	Yes	No
EMC DMX Series	Yes	Yes	No
EMC CLARiiON CX200	No	Yes	No
EMC CLARiiON CX 400/CX600	No	Yes	No
EMC CLARiiON CX300/CX500/CX700		Yes	
EMC CLARiiON FC4700	No	Yes	No
SAN 2/8	Yes	No	Yes
SAN 2/8 EL	Yes	No	Yes
SAN 2/16	Yes	No	Yes
SAN 2/16 EL	Yes	No	Yes
StorageWorks Core 2/64	Yes	Yes	Yes
StorageWorks Edge 2/24	Yes	No	Yes
StorageWorks Edge 2/32	Yes	No	Yes
StorageWorks SAN Director 2/64	Yes	Yes	Yes
StorageWorks SAN Director 2/140	Yes	No	Yes

Superdome Supported Nearline Storage

Technical Specifications

Storage Device	HP-UX 11i v2	Windows Server 2003 Datacenter Edition	Red Hat RHEL AS 3 & SUSE SLES 9
ESL9595 with SDLT 220 and 320	Yes	Yes	Yes
ESL9595 with Ultrium 230 and 460 drives	Yes	Yes	Yes
ESL9322 with SDLT 220 and 320	Yes	Yes	Yes
ESL9322 with Ultrium 230 and 460 drives	Yes	Yes	Yes
MSL5000 series with Ultrium 230 drives	Yes	Yes	Yes
MSL5000 series with SDLT 220 drives	Yes	Yes	Yes
MSL5000 series with SDLT 320 drives	Yes	Yes	Yes
MSL6000 series with Ultrium 460 drives	Yes	Yes	Yes
SSL1016 with DLT1	Yes	Yes	Yes
SSL1016 with SDLT 320	Yes	Yes	Yes
SSL1016 with Ultrium 460	Yes	Yes	Yes
Tape Autoloader 1/8	Yes	Yes	Yes
NSR 1200 FC/SCSI router for MSL series libraries	Yes	No	Yes
NSR e1200, e1200-160 FC/SCSI router for MSL libraries	Yes	No	Yes
NSR e2400, e2400-160 FC/SCSI router for ESL libraries	Yes	No	Yes
NSR 2402 FC/SCSI router for ESL series libraries	Yes	No	Yes
Optical Jukebox 2200mx	Yes	No	No
Optical Jukebox 1200mx	Yes	No	No
Optical Jukebox 700mx	Yes	No	No
Optical Jukebox 600mx	Yes	No	No
Optical Jukebox 300mx	Yes	No	No
Optical Jukebox 220mx	Yes	No	No
Optical Jukebox 9100mx	Yes	No	No
Ultrium 460 Standalone/Rack	Yes	Yes	Yes
Ultrium 230 Standalone/Rack	Yes	Yes	Yes
Ultrium 215 Standalone/Rack	Yes	Yes	Yes
DVD ROM - Rack	Yes	Yes	Yes
TA5300 - Tape Array (plus all supported devices in TA5300)	Yes	Yes	Yes
DDS-4 Standalone/Rack	Yes	Yes	Yes
DDS-4×6 Standalone	Yes	No	Yes
DDS-5 Standalone/Rack	Yes	Yes	Yes
DLT-80 Standalone/Rack	Yes	No	Yes
DLTVS80 Standalone/Rack	Yes	No	Yes

NOTES:

- All shipments of SCSI devices for Superdome except HVD10 and SC10 are supported with standard cables and auto termination enabled. Only the Surestore Disk System HVD10 (A5616AZ) and the Surestore Disk System SC10 (A5272AZ) will use disabled auto termination and In-Line Terminator cables.
- Each A5838A PCI 2-port 100Base-T 2-port Ultra2 SCSI card that supports a Surestore Disk System SC10 (A5272AZ) will need quantity two (2) of product number C2370A (terminator); otherwise it must have a terminated cable in place prior to HP UX boot.

Technical Specifications

Peripherals Required Per Partition (nPar)

	HP-UX 11i v2	Windows Server 2003	Red Hat RHEL AS 3 & SUSE SLES 9
I/O Cards	<ul style="list-style-type: none"> Core I/O (Slot 0) provides console and LAN Default Boot Device (Slot 1) Removable Media Card (Slot 8) 	<ul style="list-style-type: none"> Core I/O (Slot 0) provides console only, Windows does not support the 10/100 LAN A7061A, A7073A, A9899A or A9900A provide LAN support (Slot 2) Optional A6869A Obsidian Card (Slot 6)-USB/VGA Removable Media Card A7059A/A7060A (Slot 8) 	<ul style="list-style-type: none"> Core I/O (Slot 0) provides console and LAN Default Boot Device (Slot 1) Removable Media Card A7059A/A7060A (Slot 8)
Peripherals	<ul style="list-style-type: none"> DVD Hard Drive (Boot Disk) DDS-4/DAT-40 Tape Backup C7508AZ or C7508A (Qualec Device) 	<ul style="list-style-type: none"> DVD Hard Drive (Boot Disk) DDS-4/DAT-40 Tape Backup C7508AZ or C7508A Tape Array 5300 	<ul style="list-style-type: none"> DVD Hard Drive (Boot Disk) DDS-4/DAT-40 Tape Backup C7508AZ or C7508A (Tape Array 5300)

© Copyright 2003-2005 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice.

Microsoft and Windows Server 2003 are US registered trademarks of Microsoft Corporation. Intel and Itanium are US registered trademarks of Intel Corporation.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.